

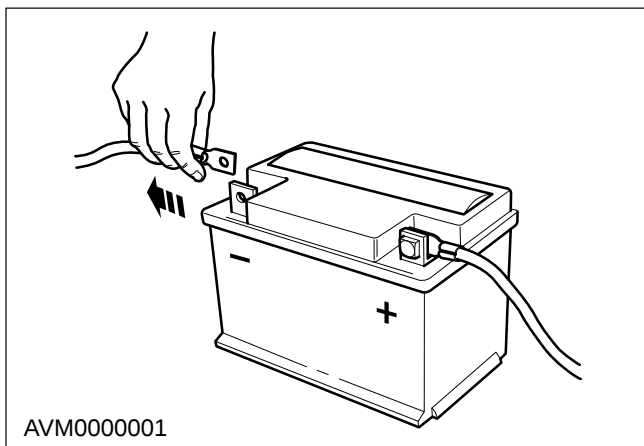


Module – Central Control – Remove and Install (33 668 0)**Remove**

1. **Disconnect the battery negative lead.**
2. **Remove the glove compartment (refer to Operation Number 43 668 0).**

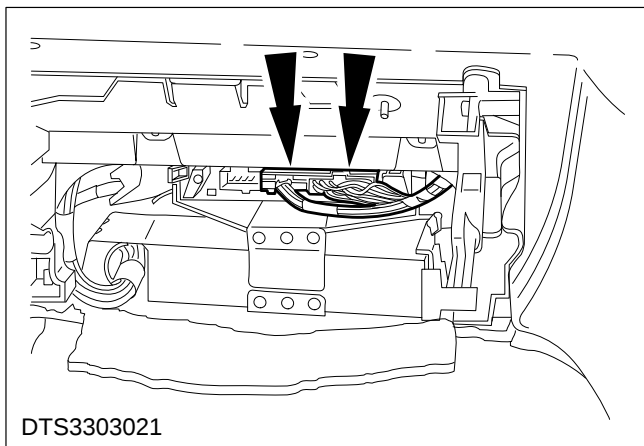

3. **Disconnect the multiplugs.**

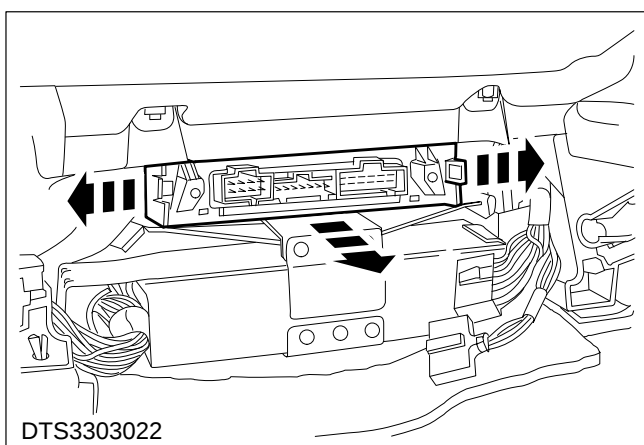

4. **Remove the module.**

Push the retaining clips outwards and pull the module forward out of the support frame.

Install

5. Refit the components in reverse order.