

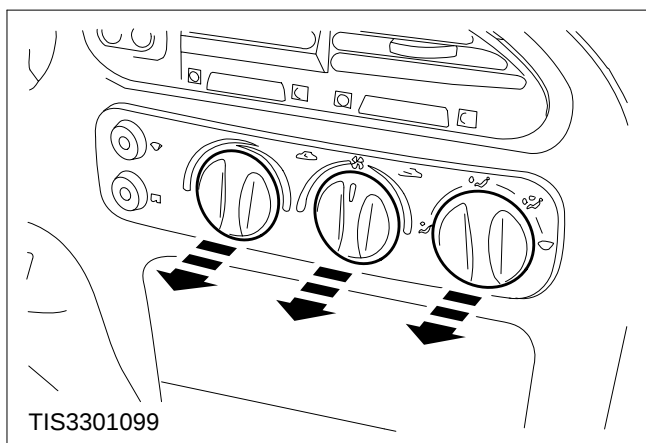


Switch – Blower Motor – Heater (Low-Series) – Remove and Install (33 574 0)**Remove**

- 1. Remove the heater control knobs.**

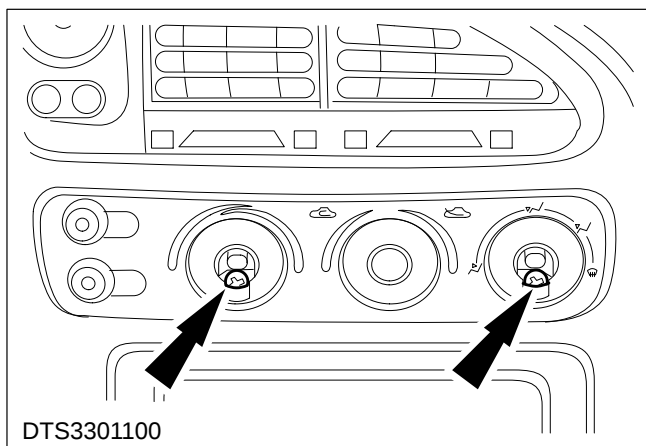


- 2. Remove the two screws securing the heater control bezel.**

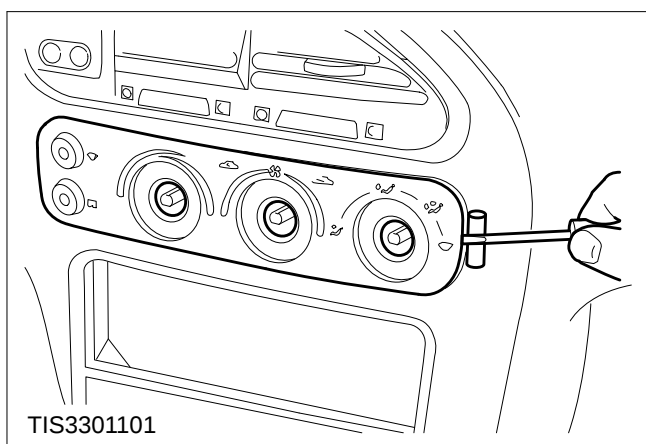

⚠ CAUTION: Only prise out the bezel from the air distribution control switch side of the bezel to prevent breakage of the locating tang at the opposite side.


- 3. Prise out the heater control bezel.**

Use a pad between the screwdriver and the surround to prevent damage.

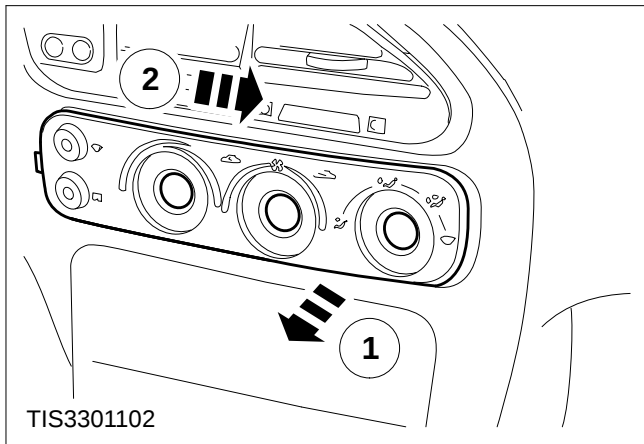

4. Remove the heater control bezel from the instrument panel fascia.

- 1 Pull out from the bezel.
- 2 Slide to one side to disengage the locating tang.

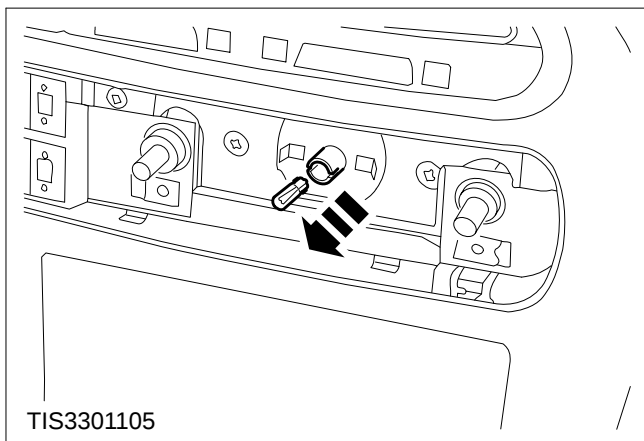


Bulb – Heater Motor Switch – Remove (33 120 0)

5. Remove the bulb.

Bulb – Heater Motor Switch – Install (33 120 0)

6. Refit the bulb.

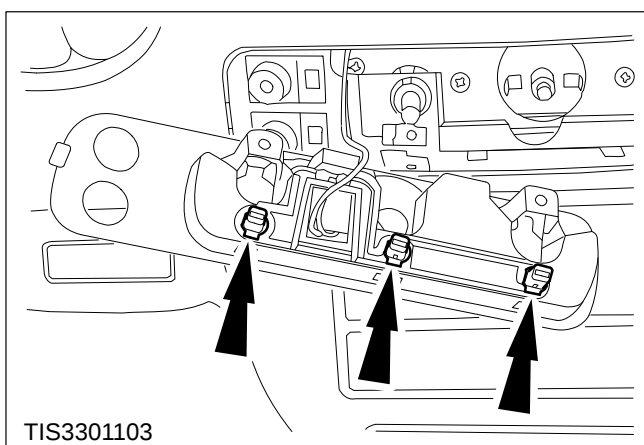


Bulb – Heater Control Illuminating – Remove (33 128 0)

7. Remove the appropriate bulb.


Twist the bulb/holder anticlockwise to remove.

Bulb – Heater Control Illuminating – Install (33 128 0)

8. Refit the bulb.

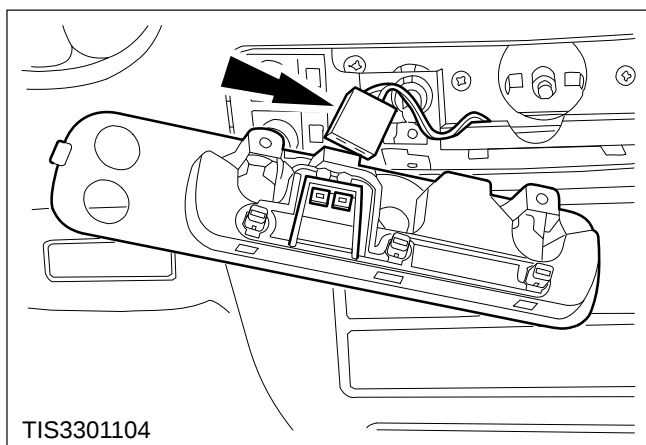


9. Disconnect the multiplug and remove the heater control bezel.

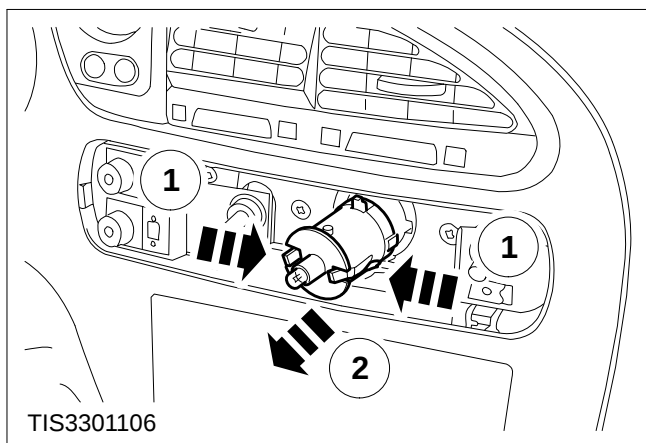

10. Remove the switch.

- 1 Depress the retaining lugs.
- 2 Pull out the switch.

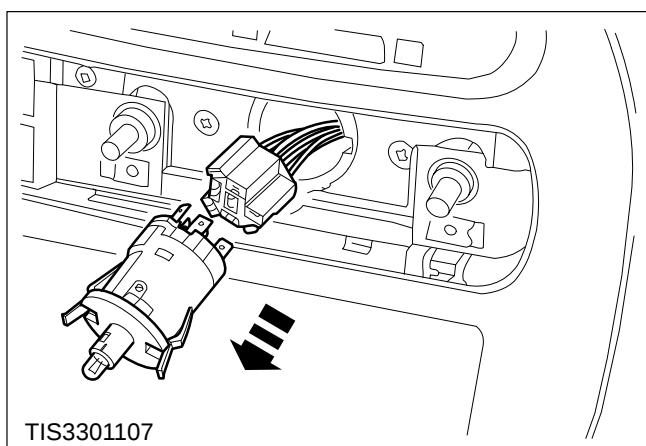

11. Disconnect the multiplug and remove the switch.

Install

12. Refit the components in reverse order.