


## Switch – Oil Pressure Warning Light (VM Diesel) – Remove And Install (33 554 0)

### Remove

1. Remove the starter motor (refer to Operation Number 26 204 0).
2. Disconnect and remove the oil pressure switch.

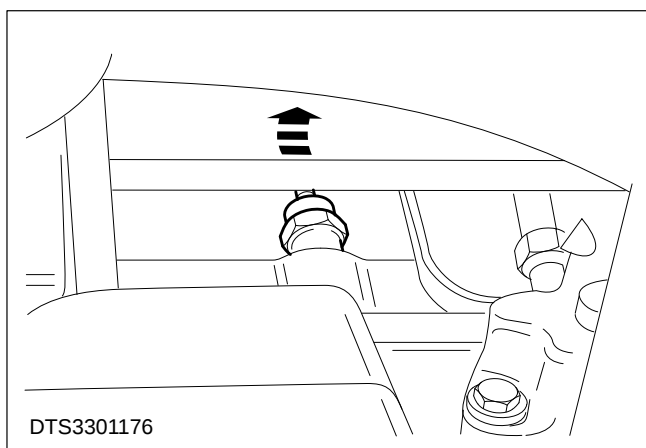

### Install

3. Refit the components in reverse order.