


Sender Unit – Temperature (DOHC 16V only) – Remove and Install (33 306 0)

Remove


⚠ CAUTION: When releasing the cooling system pressure, cover the cap with a thick cloth to prevent scalding.

1. **Slowly relieve the cooling system pressure by rotating the expansion tank cap through 90°.**
2. **Re-tighten the cap.**
3. **Detach the two air induction pipes.**

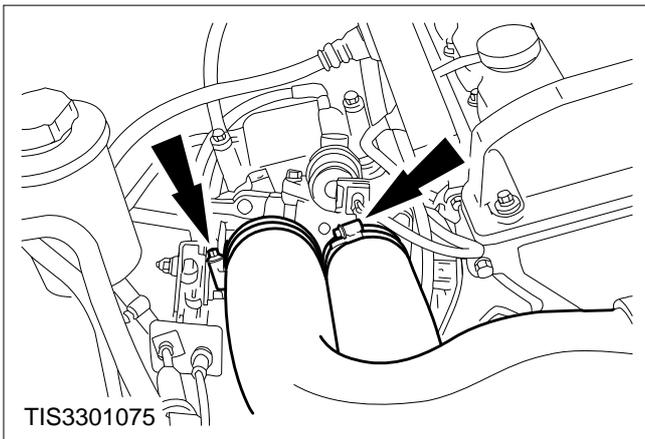

4. Remove the sender unit.

- 1 Pull off the wiring connector.
- 2 Unscrew and remove the sender unit.

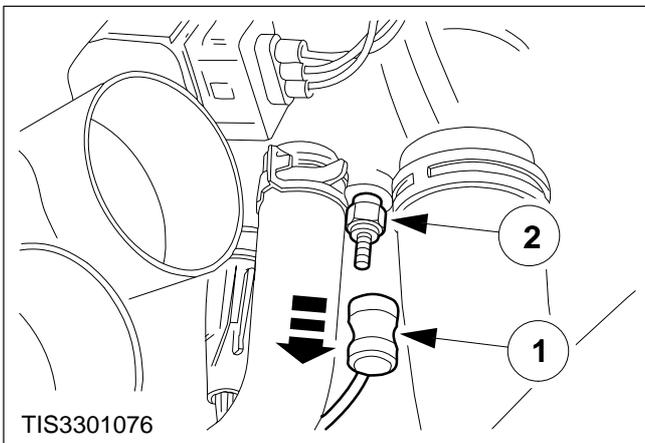

Install

5. Refit the components in reverse order.

Top up the coolant if necessary.

