Refrigerant Line - Expansion Valve to Dehydrator - Remove and Install (34 642 0)

Workshop Equipment

Servicing unit

 
Materials

O-rings	(green)
---------	---------


Remove

NOTE: "Safety Regulations" and "General Requirements and Safety Precautions for Servicing and Repairs" at the beginning of this section.

- 1. Standard preparatory measures:
- Make a note of the radio keycode.
- Make a note of the preset radio stations.
- · Lay protective covers on the fenders.




- 2. Drain the air conditioning as described in Op. no. 34 620 0.
- 3. Detach the left-hand headlamp cover.

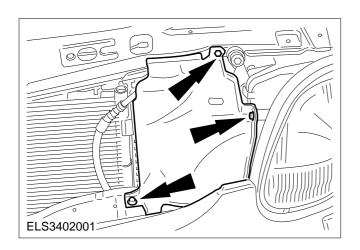




Remove the O-rings.

4. Disconnect the line from the

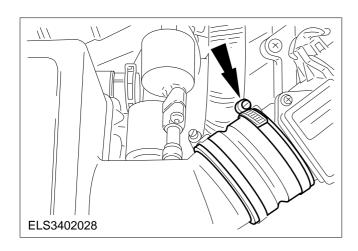


5. Detach the hose from the air cleaner housing.

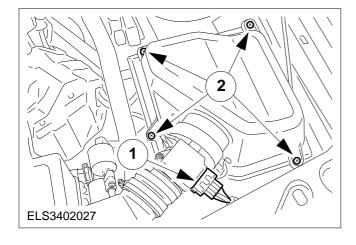


- 6. Detach the air cleaner housing.
- 1 Disconnect the multiplug from the air intake temperature sensor (IAT sensor).
- 2 Detach the top part of the air cleaner housing.


Remove the air cleaner.

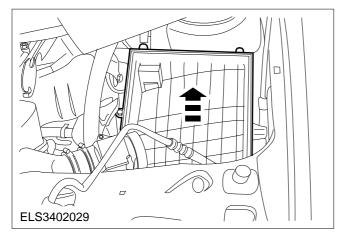


7. Detach the bottom part of the air cleaner housing.

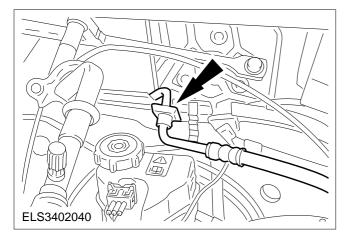

- 8. Pull the rubber seal off the bulkhead extension.
- 9. Pull the line out from the bulkhead extension.

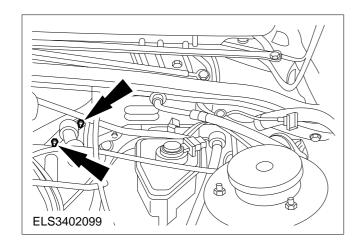

10. Detach the seal retaining plate.

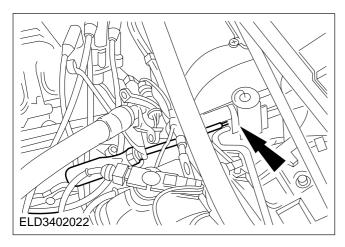

11. Disconnect the line at the expansion valve.

Remove the O-rings.

Install

NOTE: Renew all O-rings when fitting the components.

- 12. Refit the components in the reverse order.
- 13. Standard finishing operations:
- Connect the battery negative lead.
- Remove the protective covers.
- Enter the radio keycode.
- Reprogramme the preset radio stations.
- · Reset the clock.
- Road test the vehicle to collect data for the PCM.
- 14. Evacuate and fill the air conditioning as described in Op. no. 34 620 0.