


## Weatherstrip – Door Aperture – Remove and Install (41 375 0)


### Proprietary Tools

Soft Mallet
-------------

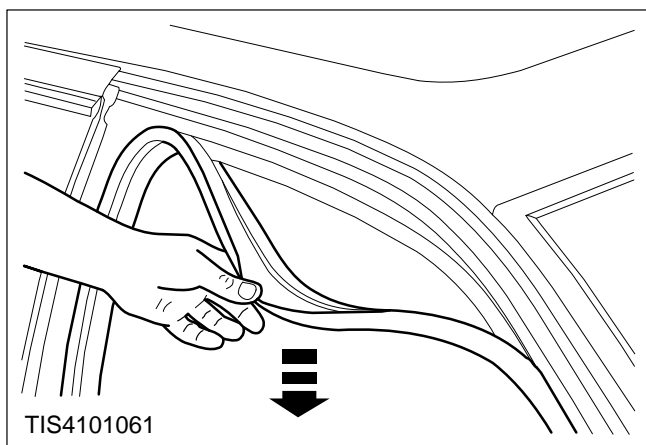

### Remove

1. Starting on the centre at the top of the door aperture, pull the weatherstrip off the body flange.

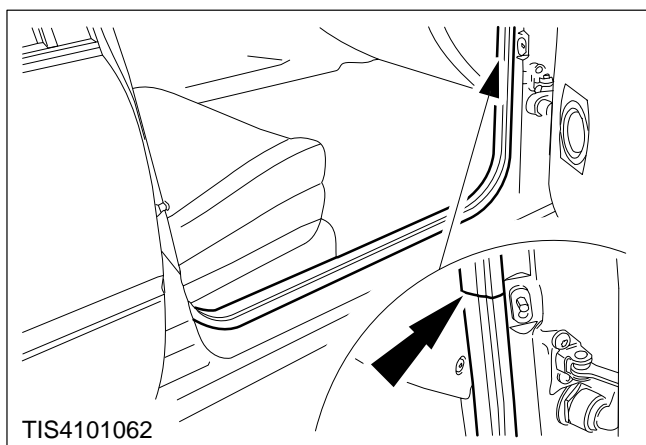

### Install

2. Refit the weatherstrip.

Starting in the top back corner of the door aperture, and ensuring the joint seal is positioned midway up the A-pillar, firmly seat the weather strip over the door aperture flange all the way around.