

Hydraulic Unit ('97 MY Onwards) – Remove And Install (12 580 0)


Remove

⚠ CAUTION: If brake fluid is spilt on the paintwork, the effected area must be immediately washed down with cold water.

1. Disconnect the battery earth lead.


2. Disconnect the brake pipes from the hydraulic unit.

- Allow the brake fluid to drain into a suitable container.
- Plug the brake pipes to prevent fluid loss and dirt ingress.

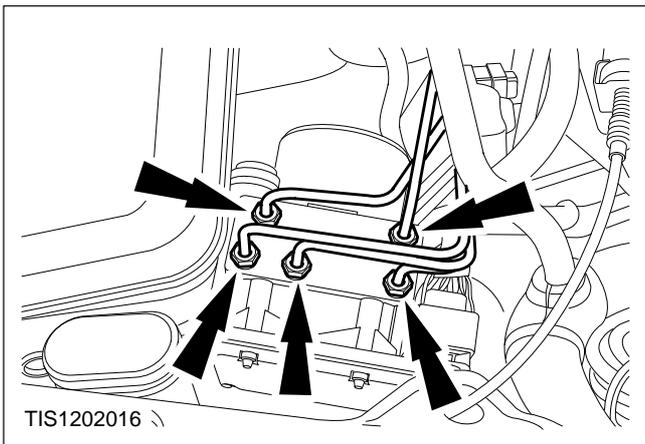



3. Disconnect the hydraulic unit multiplug.

- 1 Pull the multiplug retaining clip upwards.
- 2 Disconnect the multiplug.

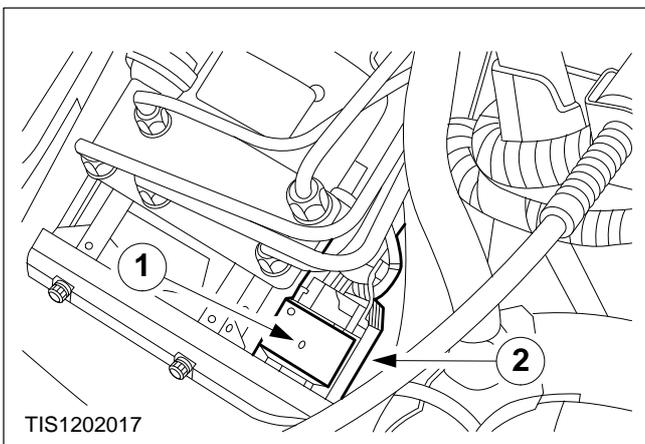


4. Remove the hydraulic unit.

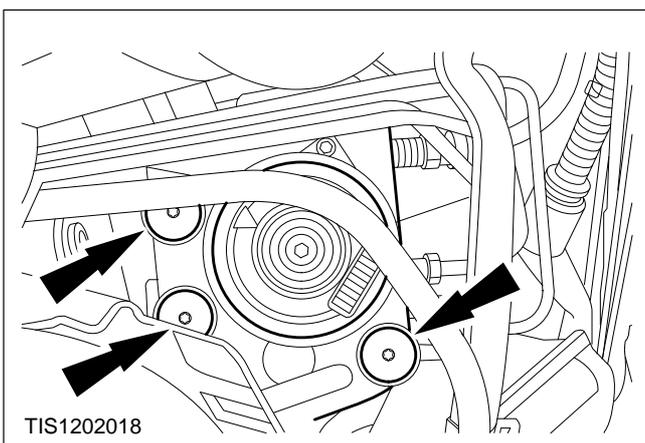

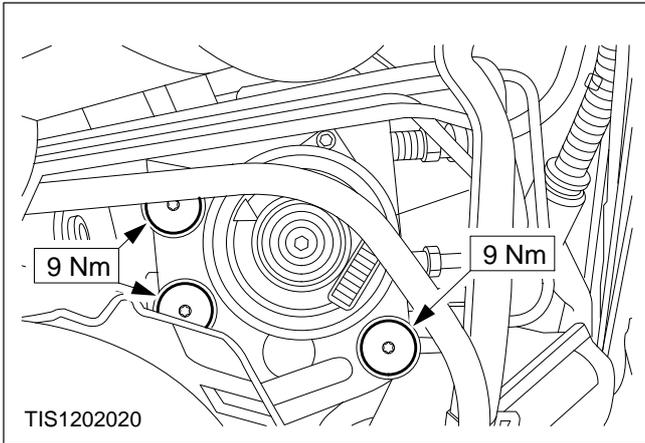

Install

5. Refit the components in reverse order.

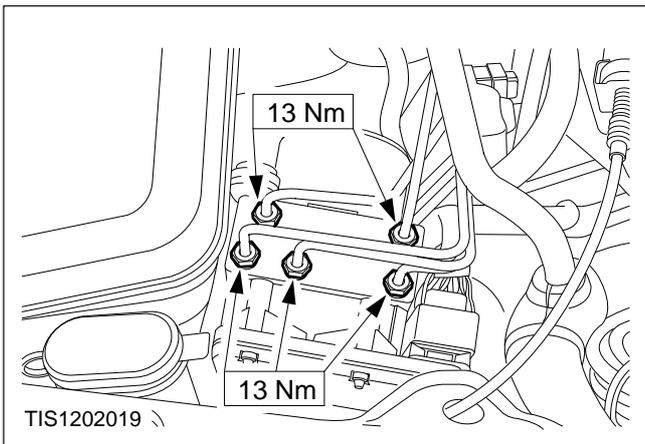

6. Bleed the braking system as described in Operation No. 12 141 0.