



## Handbrake Cable – Adjust (12 662 0)

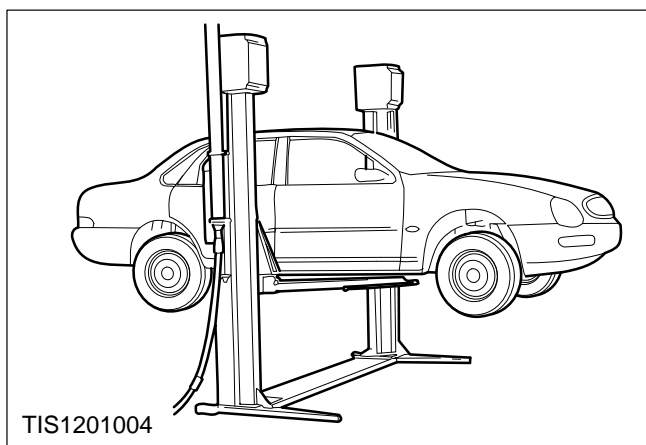


1. Release the handbrake lever and raise the vehicle.

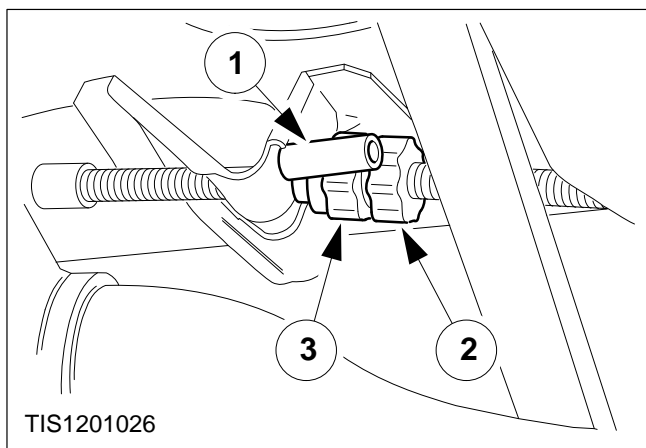

2. De-adjust the handbrake cable.

- 1 Remove the locking pin.
- 2 Slacken the adjuster locknut.
- 3 Slacken the adjuster until the levers on the calipers have returned to their stops.

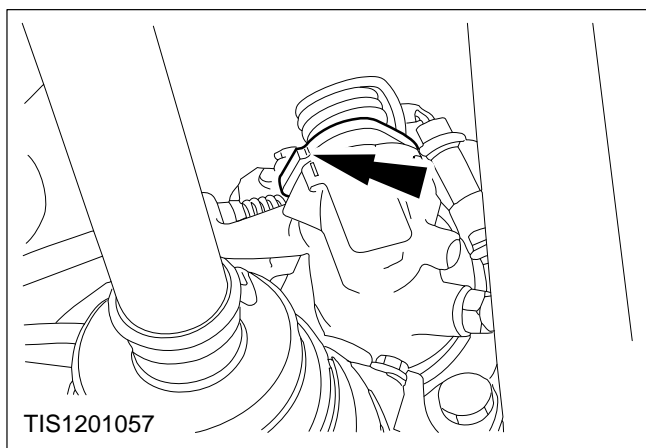

3. Paint alignment lines on the lever and caliper assemblies.
4. Tighten the adjuster until the caliper levers move from the alignment lines.
5. Apply the handbrake to equalise the cable.
6. Tighten the adjuster locknut to a minimum of three clicks and a maximum of six clicks.
7. Fit a new adjuster locking pin.
8. Lower the vehicle.