



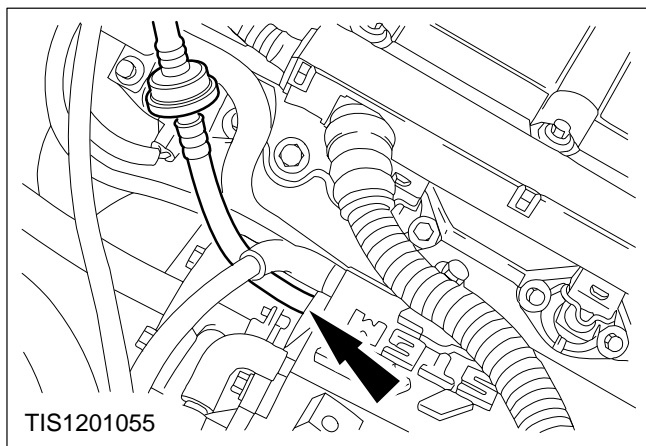
Vacuum Hose – Servo – Replace (12 481 0)

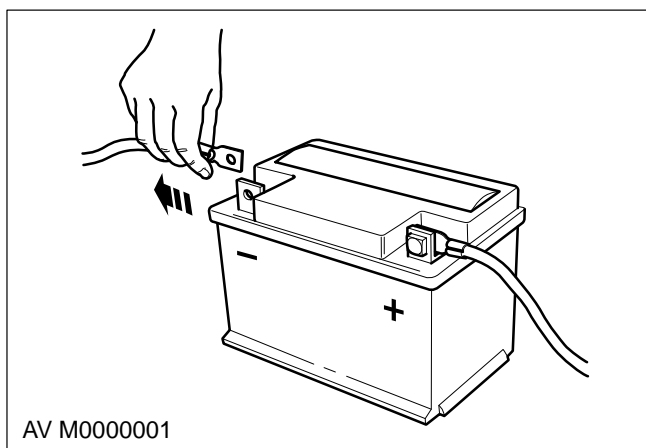

Remove


 **WARNING:** Apply the foot brake at least 20 times to de-pressurise the system.

1. **Disconnect the battery earth lead.**




Petrol variants

2. **Disconnect the vacuum hose from the inlet manifold.**

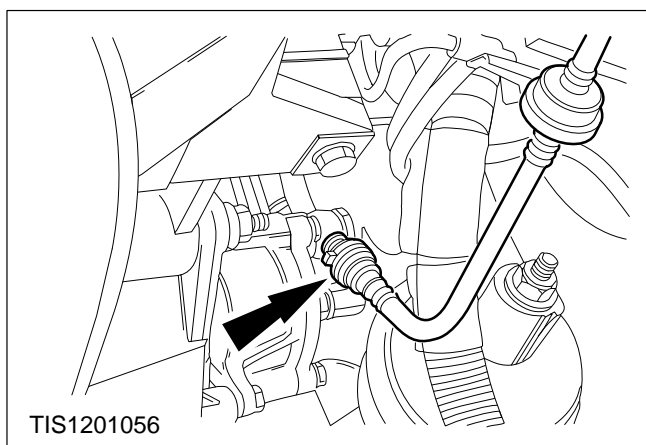

Diesel variants

3. **Disconnect the vacuum hose from the vacuum pump.**

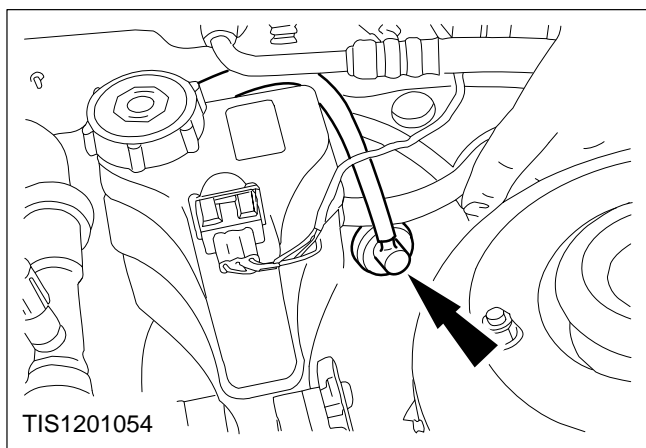

- 4. Carefully detach the vacuum hose from the servo housing.**

Install

- 5. Refit the components in the reverse order.**