
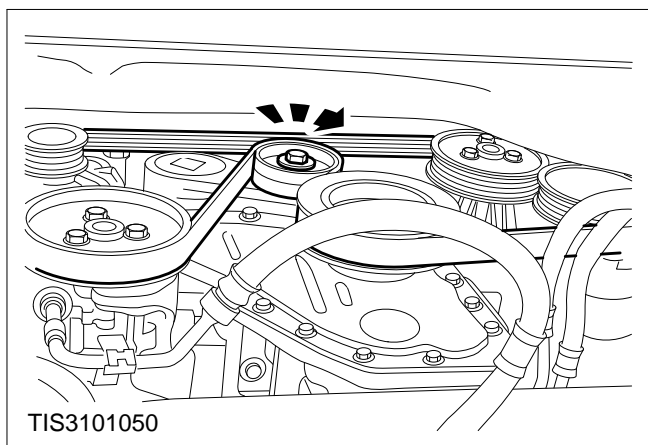


Drive Belt – Alternator (2,3 DOHC 16V) – Remove And Install (31 413 0)

Remove

1. Raise the vehicle.
2. Remove the undershield.

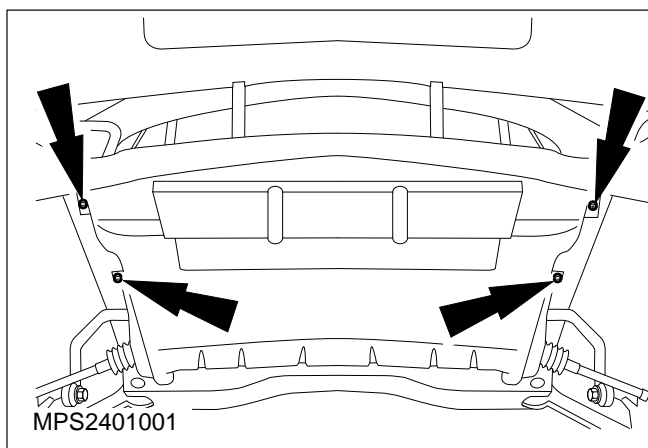

3. Remove the alternator drive belt.

Reduce the tension on the belt by turning the tensioner clockwise.

Install

4. Refit the alternator drive belt.

Turn the tensioner clockwise.

Ensure that the drive belt is correctly aligned on all the pulleys

