# Pivot Shaft - Windscreen Wiper - Remove and Install (32 563 0)

#### **Materials**

Grease	SAM-1C-9111-A
--------	---------------

 
#### Remove

 
## 1. Standard preparatory measures:

**NOTE:** Only dismantle the wiper linkage for repairs.


- Make a note of the radio keycode.
- Put protective covers on the wings.
- Make a note of the preset radio stations.


**NOTE:** The wiper motor must be in the parked position.

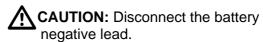

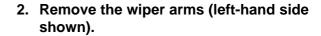


- Unscrew the nuts and remove the waved washers.
- Raise the wiper arms and release them from the taper with sideways movements.

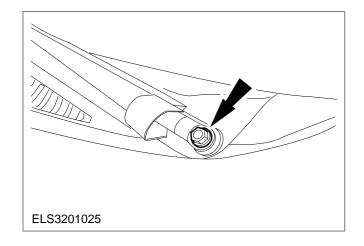

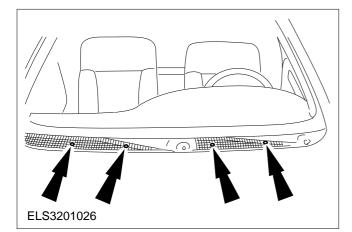


#### 3. Remove the cowl grille.


- Remove the caps and undo the four screws.
- · Open the hood.

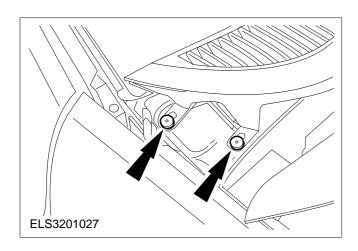


4. Remove the cowl grille (continued).

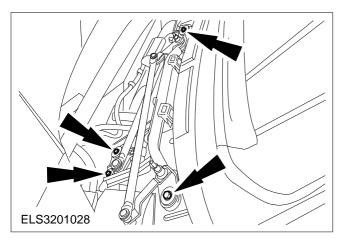

5. Completely disconnect the wiper motor and the linkage.

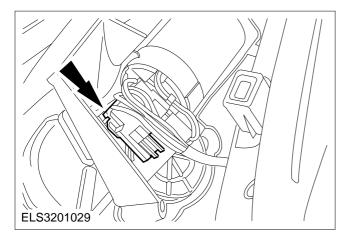


6. Disconnect the wiper motor multiplug.

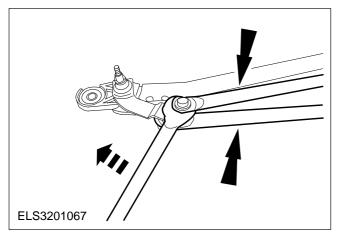


- 7. Prise the wiper linkage off the pivot.
- 8. Check the running faces of the pivot shaft and linkage.

If necessary, renew the linkage and pivot shaft bearing.

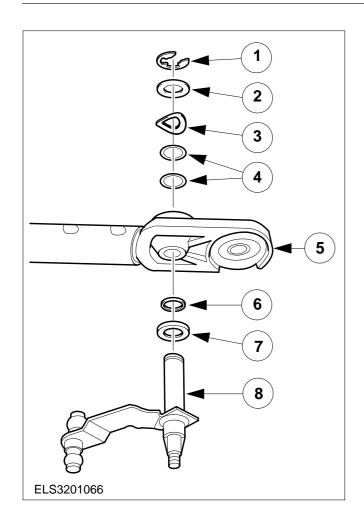

- 9. Dismantle the pivot bearing.
  - 1 Circlip
- 2 Washer (d = 1.8 mm).
- 3 Waved washer.
- 4 Special washers (d = 0.2 mm).
- 5 Pivot shaft bearing bush.
- 6 Seal.
- 7 Washer.
- 8 Pivot shaft.

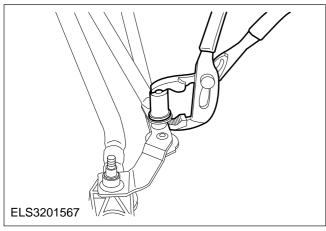

## Install


**NOTE:** Grease the pivot shaft.


10. Reassemble the pivot bearing in the reverse order.

**NOTE:** Use a pair of universal pliers, with a bush or socket underneath.


CAUTION: Only apply pressure to the outer edges of the bearing shells.

- 11. Clip the wiper linkage onto the pivot.
- 12. Install the wiper motor and the linkage.
- 13. Push on the wiper motor connector.

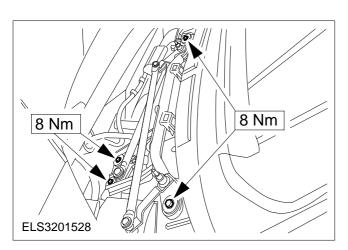

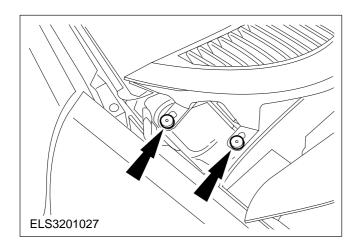


# 14. Fit the cowl grille.

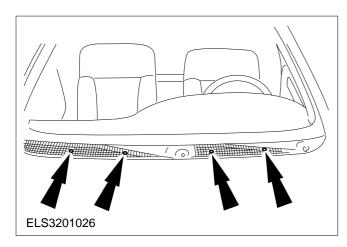

# 15. Fit the cowl grille (continued).

- Close the hood.
- Tighten the screws and fit the caps.

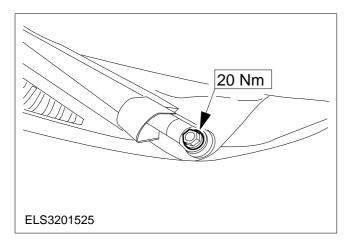

# 16. Fit the wiper arms (left-hand side shown).

- Fit the waved washer and the nut.
- Fit the wiper arms and tighten the nuts fingertight.
- Make sure that the wiper arms do not touch the grille or the trim strip.
- Tighten the nuts of the wiper arms.

## 17. Standard finishing operations:

- Connect the battery negative lead.
- Remove the protective covers.
- Enter the radio keycode.
- Reprogramme the preset radio stations.
- · Reset the clock.
- Road test the vehicle to collect data for the PCM.