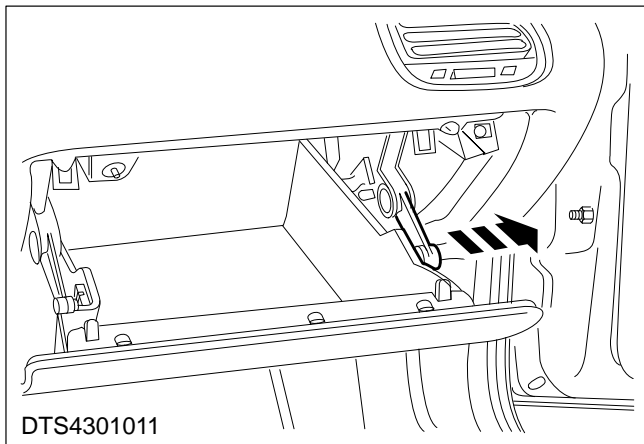
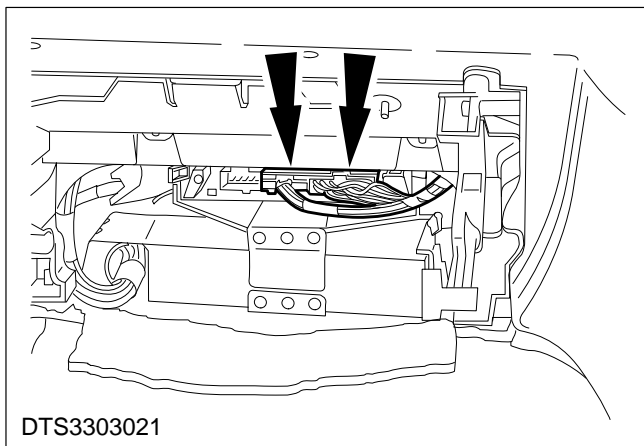


**Module – Central Control – Remove and Install (33 668 0)****Remove**


**⚠ CAUTION:** Disconnect the battery negative lead.

**1. Remove the glove compartment lid.**

Carefully prise the bracket to one side to release.

**2. Disconnect the multiplugs.****3. Remove the module.**

Push the retaining clips outwards and pull the module forwards.

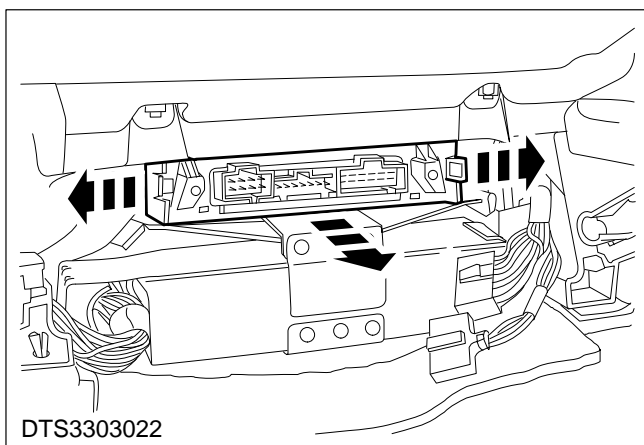

Install

**4. Refit the components in reverse order.**