

Trip Computer Module – Remove and Install (33 651 0)

The trip computer must not be removed from the instrument cluster. If the trip computer needs to be renewed then the complete instrument cluster must be renewed.