



Sensor – Intake Air Temperature – Remove and Install (29 622 0)

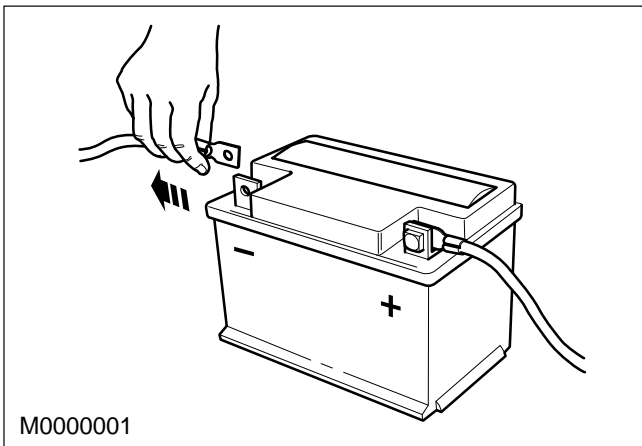


Remove


1. Disconnect the battery earth lead.

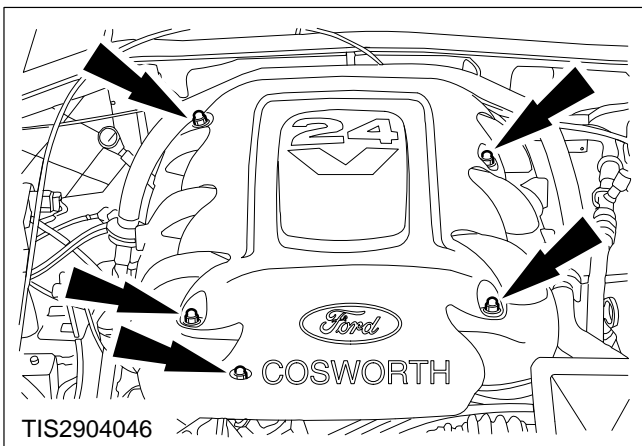

2. Remove the engine cover.

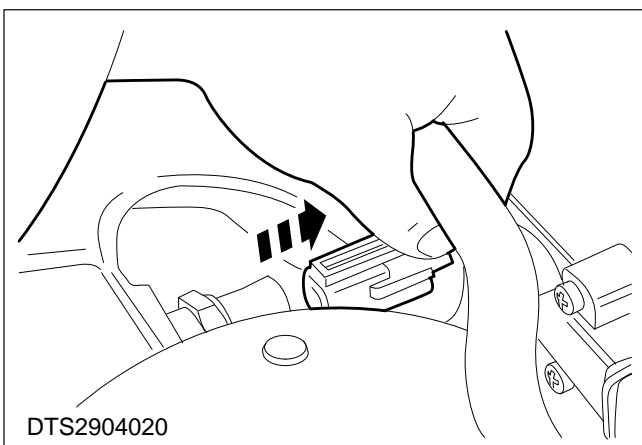

3. Disconnect the multiplug.

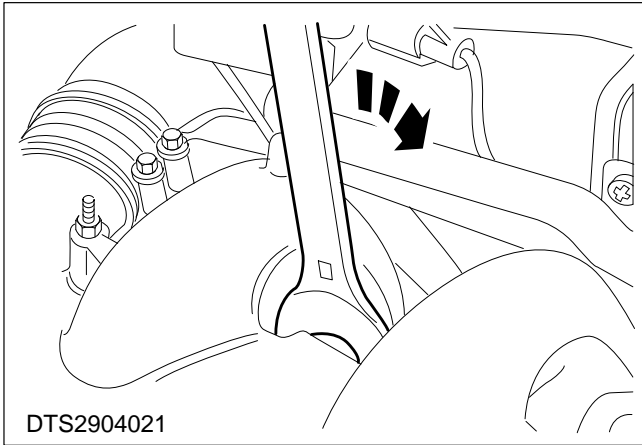

4. Unscrew and remove the sensor.

Install

5. Refit the components in reverse order.