

Sensor – Intake Air Temperature (2.3 DOHC) – Remove And Install (29 622 0)


Remove

⚠ CAUTION: Disconnect the battery negative lead.

⚠ CAUTION: When disconnecting the multiplugs contained in this operation, do not pull on the wiring; pull on the multiplug body.


1. Disconnect the IAT sensor multiplug.

Depress the retainer and disconnect the multiplug.

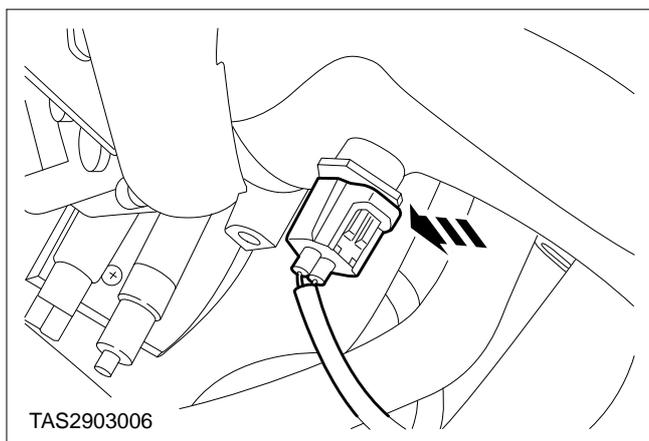

2. Remove the IAT sensor.

Pull the multiplug from the intake hose.

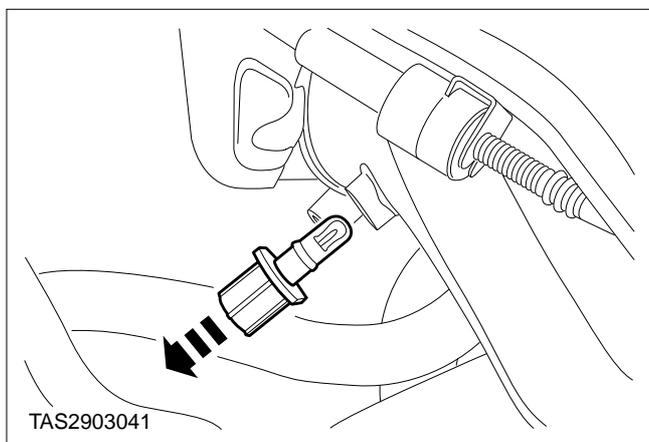

Install

3. Refit the components in reverse order.