


## Valve – Idle Air Control – Remove and Install (23 323 0)

### Remove


**⚠ CAUTION:** Disconnect the battery negative lead.

**⚠ CAUTION:** When disconnecting the multiplugs contained in this operation, do not pull on the wiring; pull on the multiplug body.


1. Disconnect the IAC valve multiplug (2,0 DOHC shown).

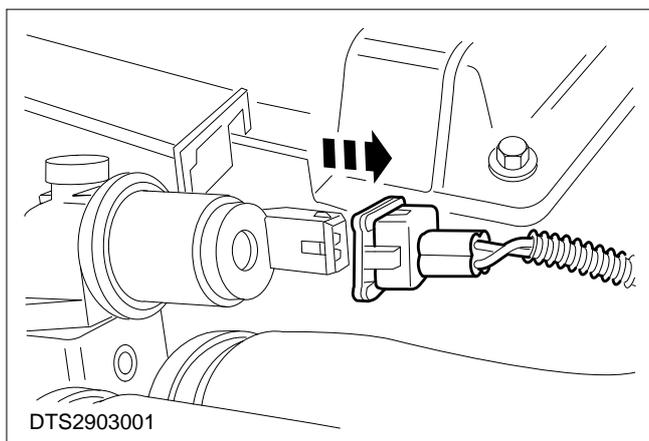


2. Unscrew the IAC valve retaining bolts (2,0 DOHC shown).

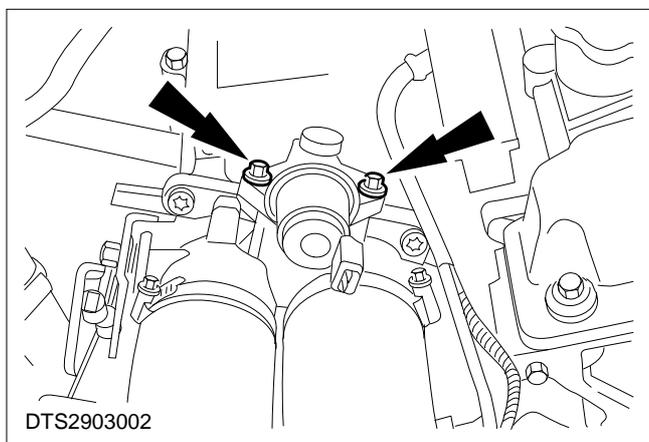

3. Remove the IAC valve 2,0 DOHC.

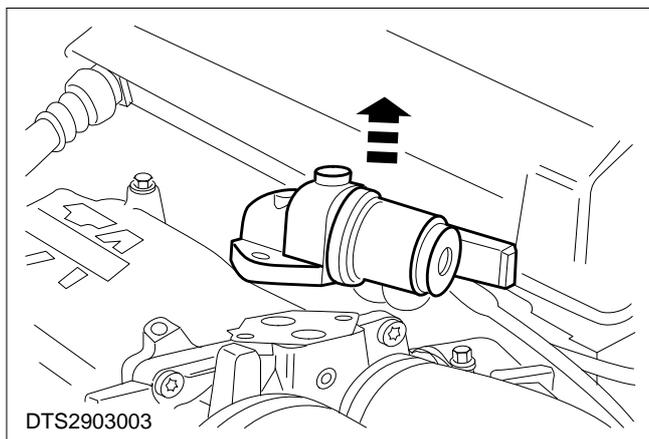

**4. Remove the IAC valve 2,3 DOHC.**

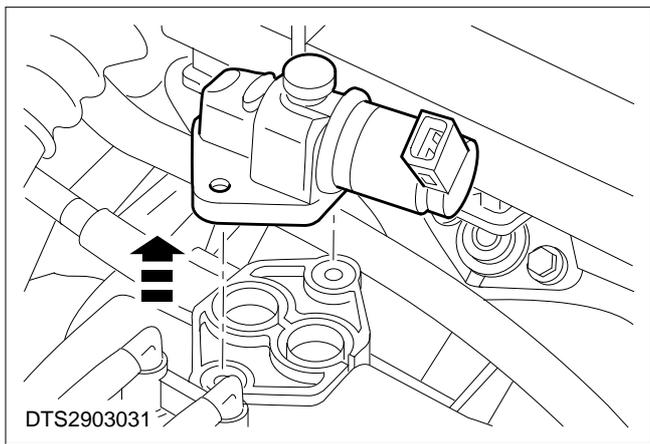

**Install**

**NOTE:** Gasket/rubber seal should not be re-used.

**5. Refit the components in reverse order.**

