Oil Pressure - Engine Hot - Check (21 113 0)

Workshop Equipment

Oil pressure test gauge GV 2134	
Connector no. 39 for the oil pressure test	
gauge	

Materials

Sealant for oil pres-	
sure switch	WSK-M2G349-A7
(Loctite 243)	


Proprietary Tools

Oil 1	filter	strap	wrench
-------	--------	-------	--------


1. General note.


The oil pressure reading depends on a number of factors (engine speed, oil temperature, oil pump clearance etc.). The measurement should always be taken with the oil at a temperature of 80° C.

- 2. Raise the vehicle.
- 3. Remove the engine undershield.

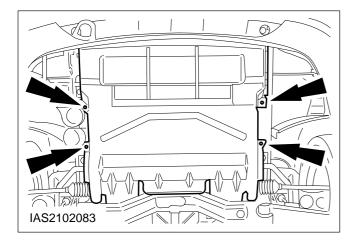


4. Remove the oil filter.

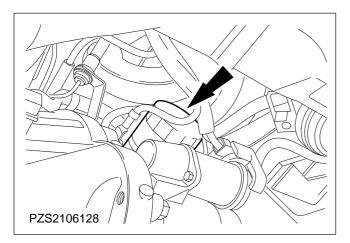

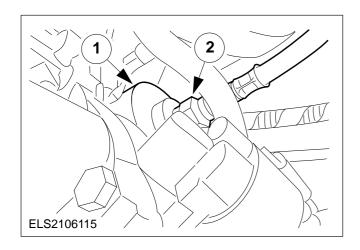


- 5. Attach the oil pressure test gauge.
 - 1 Connector to oil filter connecting flange.
 - 2 Oil pressure test gauge hose.

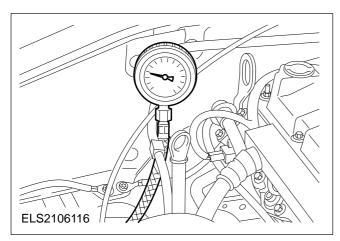


- 6. Lower the vehicle.
- 7. Check the oil pressure.

NOTE: Maximum oil pressure: 4,6 bar.

- Oil pressure at idle: 1,6 bar.
- Oil pressure at 2000 rev/min: 3,1 bar.

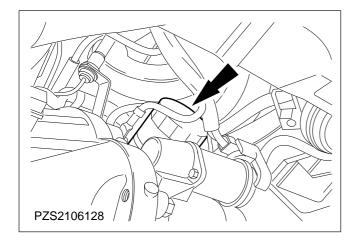

- 8. Raise the vehicle.
- 9. Detach the oil pressure test gauge and the connector.
- 10. Install the oil filter.

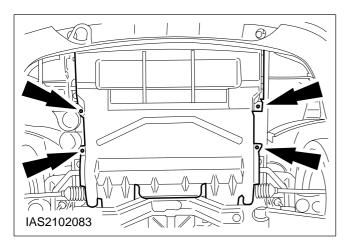

- 11. Fit the engine undershield.
- 12. Lower the vehicle.
- 13. If necessary, top up with engine oil.