

Module – Driver Side – Air Bag – Remove and Install (40 700 0)

Remove



⚠ WARNING: Wait at least 15 minutes after disconnecting the battery before disconnecting the electronic control module multiplug. For all other supplementary restraint system multiplugs wait two minutes. If these times are not observed there may be the possibility of accidentally deploying the air bag(s) and the pyrotechnic seat belt pre-tensioners.

⚠ WARNING: Always work on the air bag module from the side. Always carry the module with the cover side uppermost and away from the body. Do not attempt to repair, open or apply power (multimeter) to the air bag module terminals.


⚠ CAUTION: Disconnect the battery negative lead.

1. Detach the air bag module.

- Rotate the steering wheel 90° to access and release the Torx screw.
- Rotate the steering wheel 180° to access air release second Torx screw.

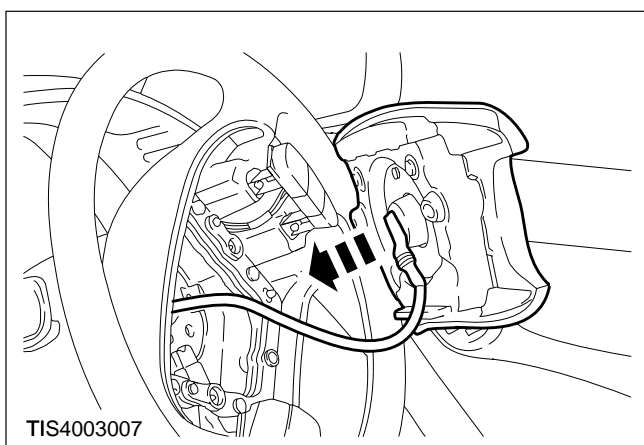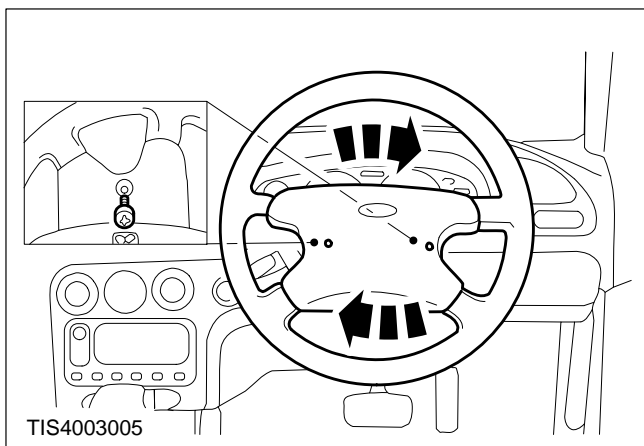

2. Disconnect the air bag module multiplug.

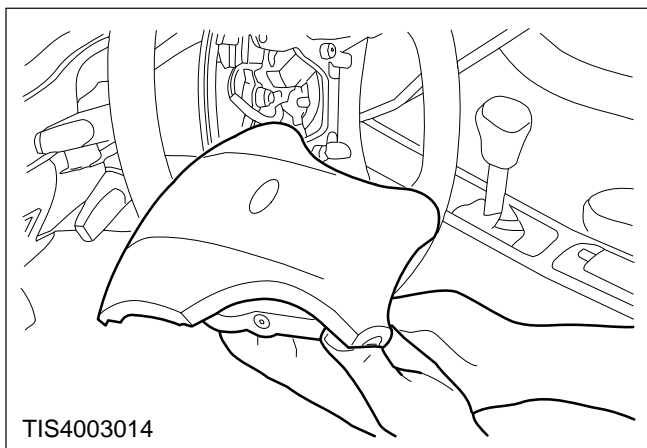

⚠ WARNING: Always carry the module with the cover side away from the body and stand it with the cover uppermost. Do not attempt to repair/open or apply electrical power to the module. Never use modules that are visibly damaged. Do not expose the module to heat sources in excess of 100°C.

3. Remove the air bag module from the vehicle.

Install

⚠ CAUTION: Ensure that the inflator wiring is correctly routed.

4. Refit the components in reverse order.