

## Control Module – Air Bag – Remove and Install (33 650 0)

### Remove

**⚠ WARNING:** Wait at least 15 minutes after disconnecting the battery before disconnecting the electronic control module multiplug. For all other supplementary restraint system multiplugs wait two minutes. If these times are not observed there may be the possibility of accidentally deploying the air bag(s) and the pyrotechnic seat belt pre-tensioners.


**⚠ WARNING:** Always work on the air bag module from the side. Always carry the module with the cover side uppermost and away from the body. Do not attempt to repair, open or apply power (multimeter) to the air bag module terminals.


**⚠ CAUTION:** Disconnect the battery negative lead.

1. **Remove the instrument cluster (refer to Operation Number 33 214 0).**
2. **Remove the lower facia crash pad panel (refer to Operation Number 43 644 0).**
3. **Disconnect the air bag control module multiplug.**


1 Depress the tang.

2 Release the self locking connector two stage; first disengages connector, second releases connector from module.

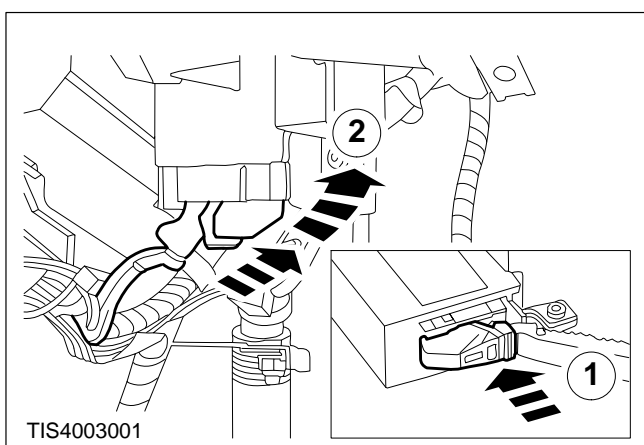


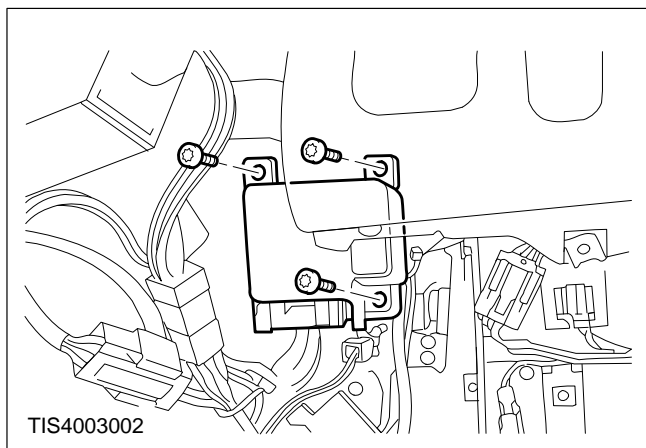

4. Remove the three retaining bolts.

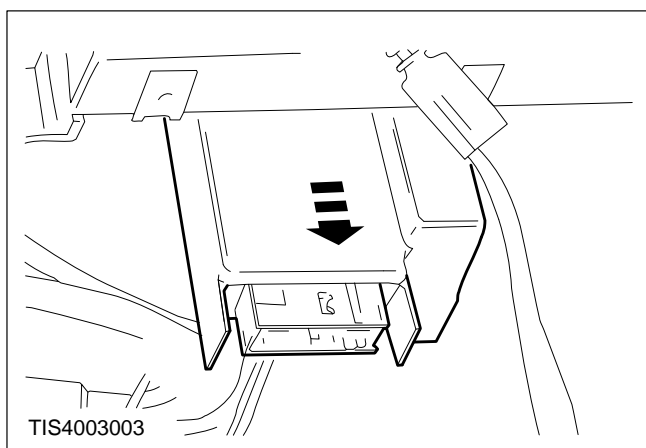

5. Remove the air bag control module from the vehicle.

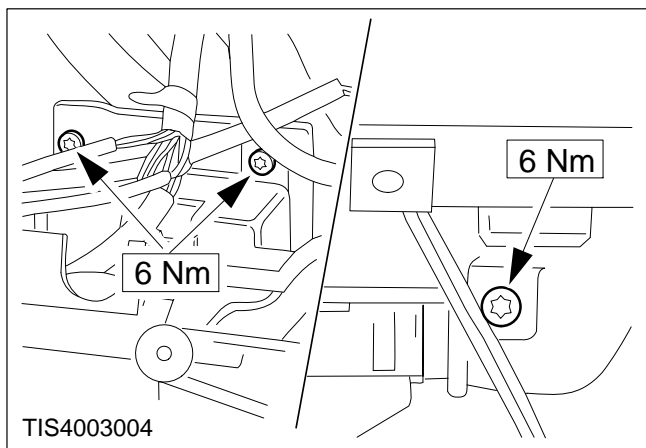

Install

6. Refit the components in reverse order.