

Heater Controls – Front – Remove and Install (34 311 0)

Remove



1. Standard preparatory measures:

- Make a note of the radio keycode.
- Make a note of the preset radio stations.
- Lay protective covers on the fenders.

⚠ CAUTION: Disconnect the battery negative lead.

2. Remove the driver's airbag as described in Operation Number. 40 700 0.

3. Remove the steering wheel.

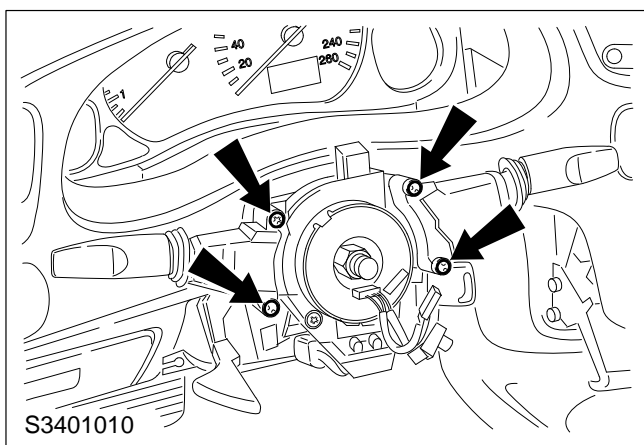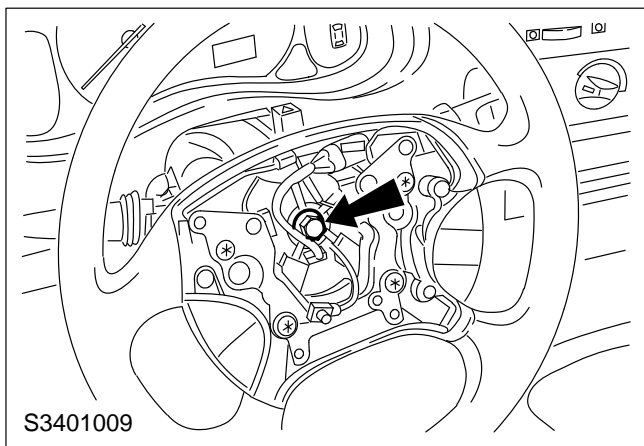


4. Detach the two multifunction switches.

Disconnect one plug on the left and one on the right.


5. Remove the instrument cluster bezel as described in Operation Number. 34 354 0.

6. Remove the fascia crash pad as described in Operation Number 34 354 0.

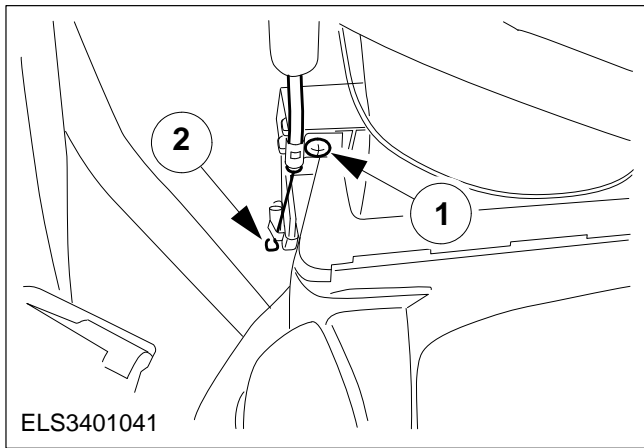


7. Disconnect the Bowden cables from the right and left-hand side of the heating housing (left-hand side shown).

- 1 Detach the cable bracket.
- 2 Unclip the cable.

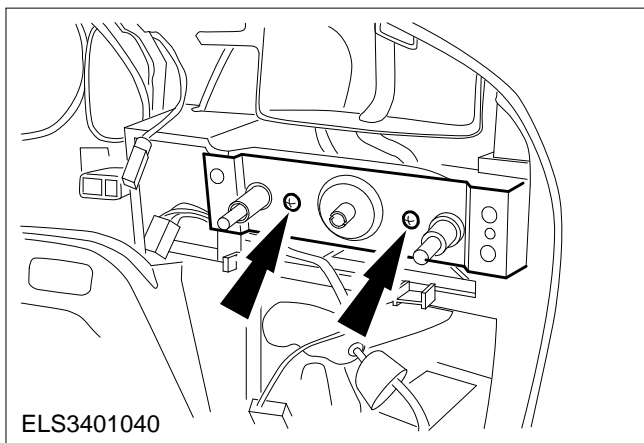

8. Remove the front heater controls.

- Remove the controls.
- Disconnect the plug from the blower motor switch.
- Disconnect the plug from the heater end switch.

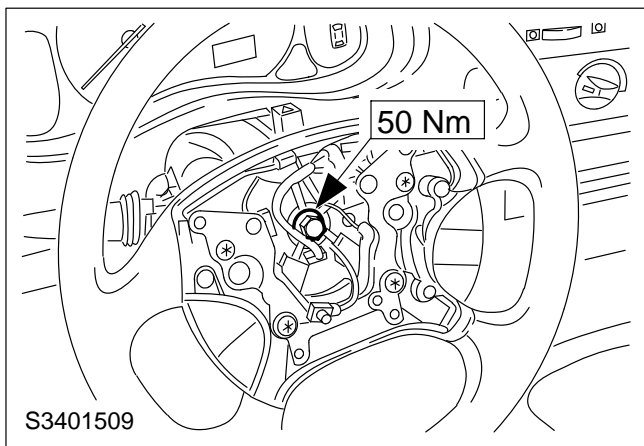

Install

NOTE: Torques.

9. Refit the components in the reverse order.

10. Standard finishing operations:

- Connect the battery negative lead.
- Remove the protective covers.
- Enter the radio keycode.
- Reprogramme the preset radio stations.
- Reset the clock.
- Road test the vehicle to collect data for the PCM.