


Heater Assembly – Dismantle and Assemble (heater assembly removed) (34 354 8)


Electronically Controlled Air Conditioning System

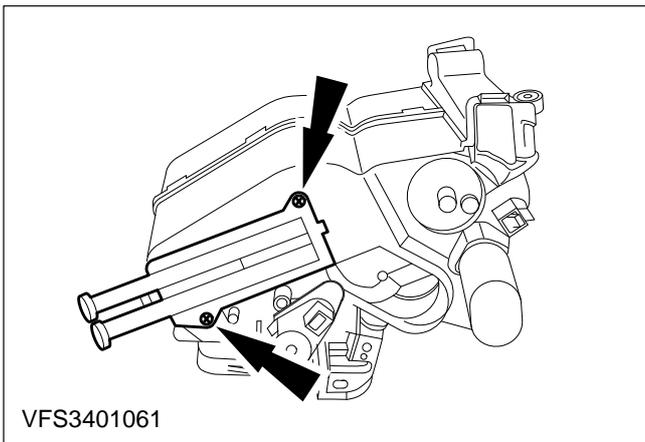

Remove the heater radiator

1. Dismantle the heater housing.

Remove the radiator.

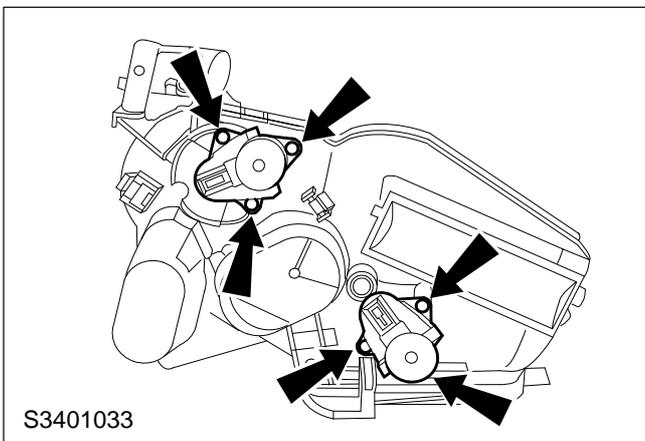**2. Dismantle the heater housing (continued).**

Remove the air distribution control motor and the air temperature door motor on the driver's side.

Install the heater radiator

3. Reassemble the components in the reverse order.