


Cushion – Rear Seat – Remove and Install (40 122 0)

Remove

1. Fold the rear seat cushion forwards.
2. Remove the rear seat cushion (four bolts).

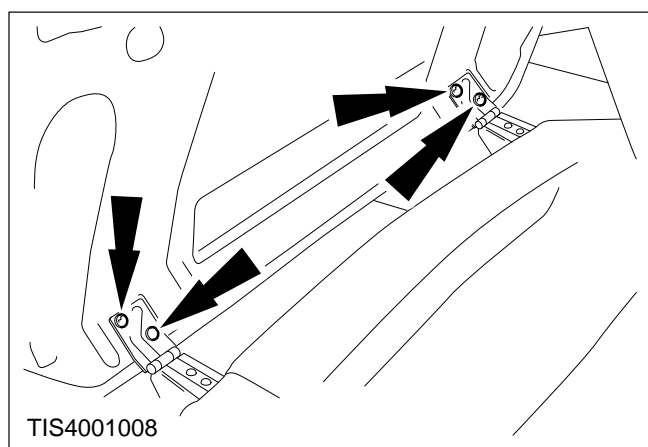

Install

3. Refit the components in reverse order.