


Hinge – Rear Seat Backrest – Remove and Install (40 512 0)

Remove

1. Remove the rear seat backrest (refer to Operation Number 40 128 0).
2. Remove the hinge

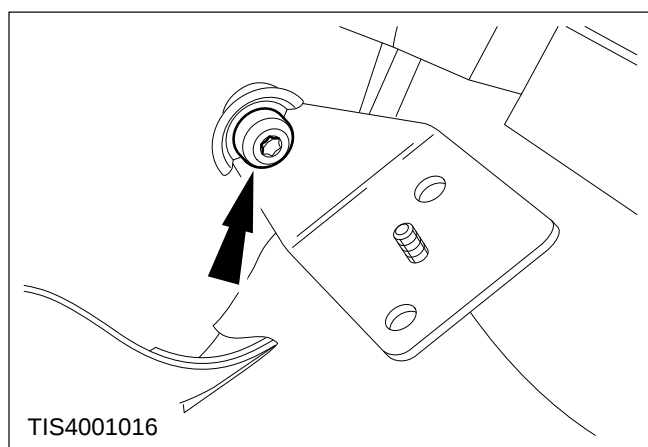

Install

3. Refit the components in reverse order.