



Side Bolster – Rear Seat Backrest – Remove and Install (40 135 0)

Remove


1. Fold the rear seat cushion forwards.
2. Release the inner and outer lower securing tangs.

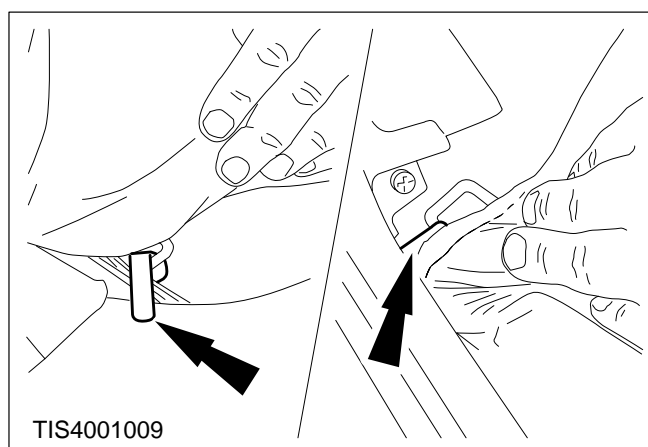


3. Detach the lower seat belt securing bolt.
4. Fold the rear seat backrest forwards.
5. Remove the rear seat backrest (refer to Operation Number 40 128 0).

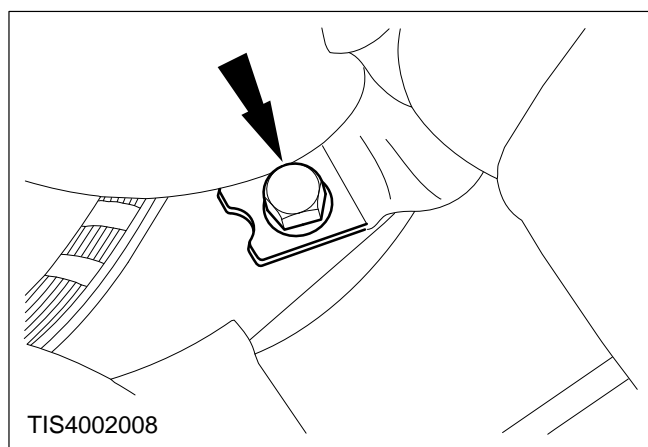


6. Remove the rear seat backrest outer retaining bracket (one Torx bolt).

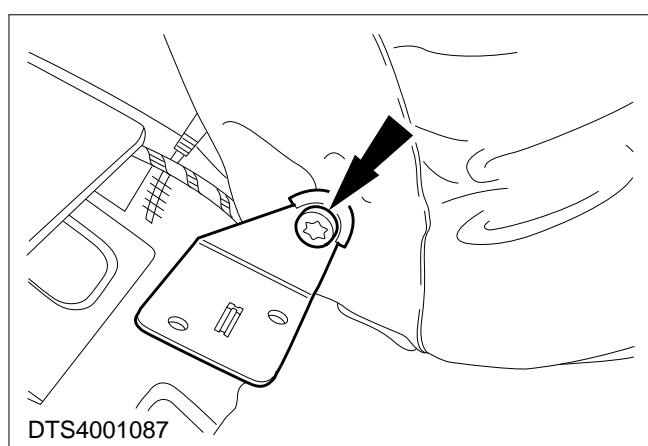


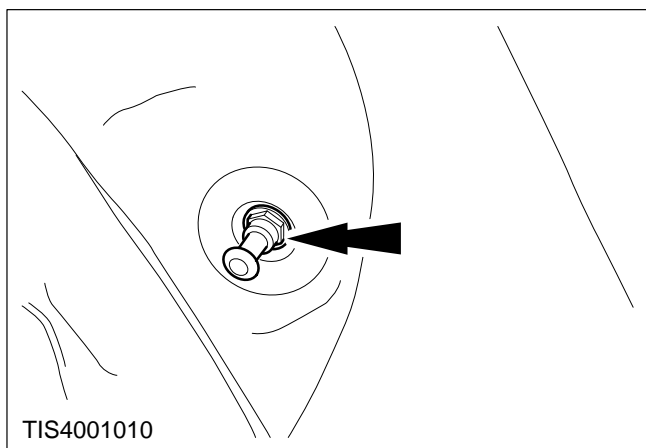

7. Remove the rear seat backrest catch pin.

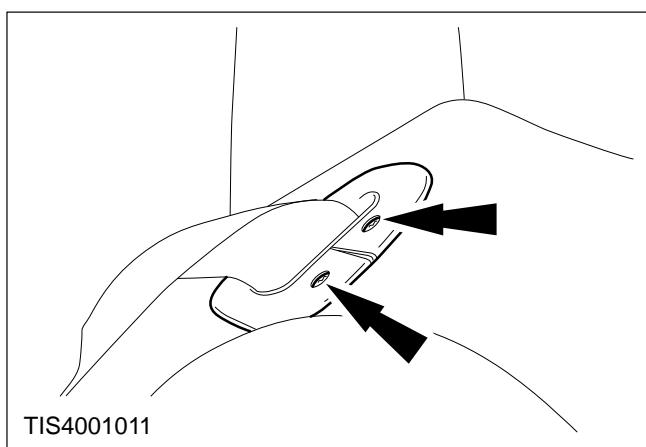


8. Remove the seat belt guide bezel screws.

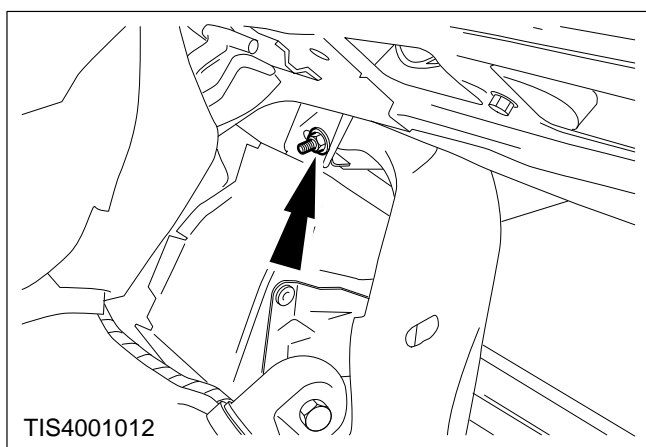

9. Remove the upper securing nut.

10. Remove the bolster.

Feed the seat belt out of the bolster.

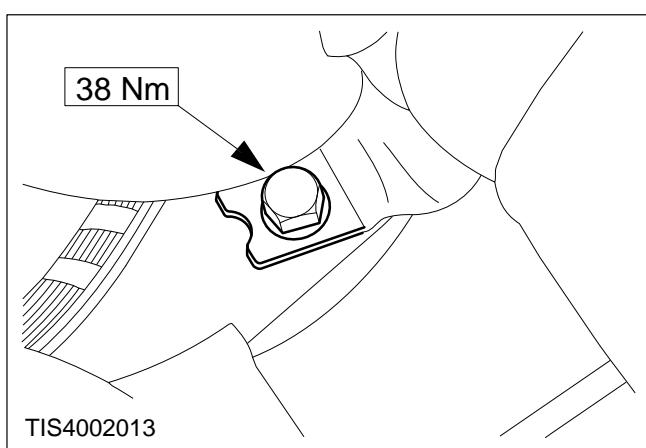

Install

11. Refit the components in reverse order.