


A – Pillar Trim – Remove and Install (43 616 0)

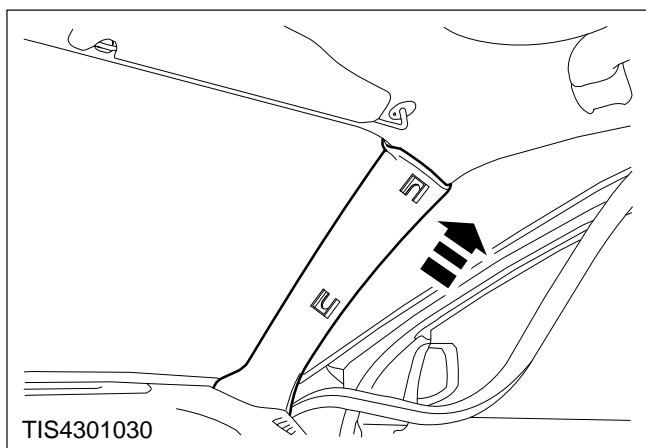

Remove

⚠ CAUTION: Care should be taken when removing items of trim secured by clips in order to avoid unnecessary damage.

1. Remove the A – pillar trim.

Pull the trim upwards to disengage the middle and lower clips.

Install

2. Refit the components in reverse order