


B – Pillar Trim (Lower) – Remove and Install (43 617 0)

Remove

1. Remove the upper B – pillar trim (refer to Operation Number 43 617 0).
2. Unclip and remove the lower B – pillar trim.

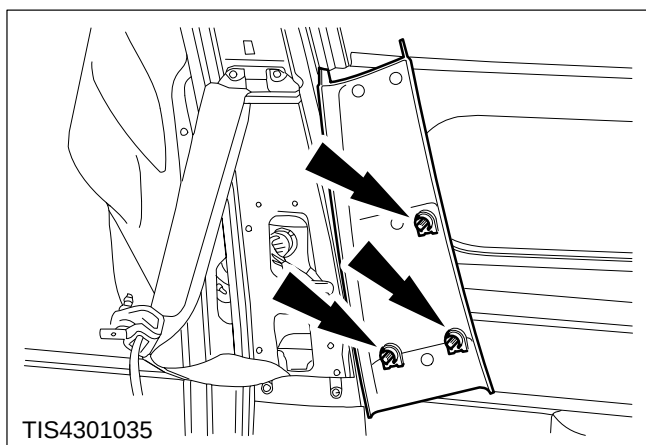

Install

3. Refit the components in reverse order.