

Radio Antenna – Manual – Remove and Install (38 352 0)



Remove

⚠ CAUTION: Disconnect the battery negative lead.

⚠ CAUTION: When disconnecting the multiplug do not pull on the wiring; pull on the multiplug body.


1. **Prise out and remove the front interior lamp.**

- Use a pad between the screwdriver and the surround to prevent damage.
- Disconnect the multiplugs.

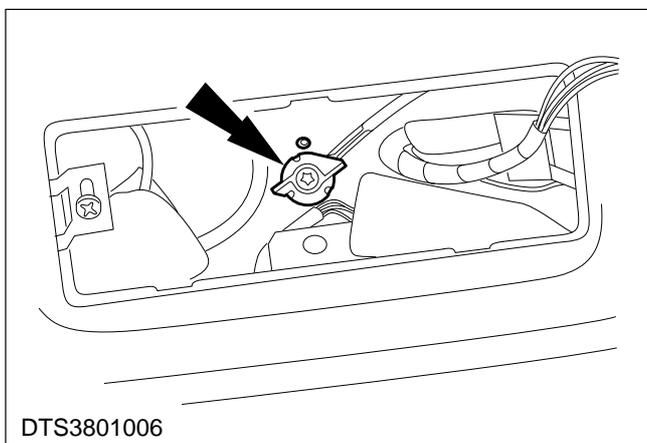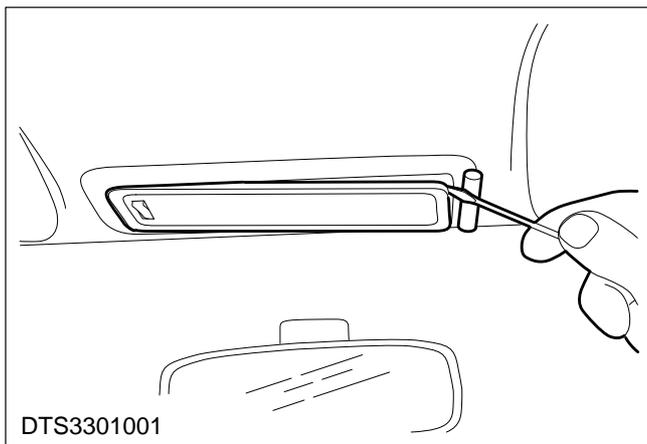

NOTE: The antenna mast unscrews from the antenna base.

2. **Remove the antenna (one Torx screw).**

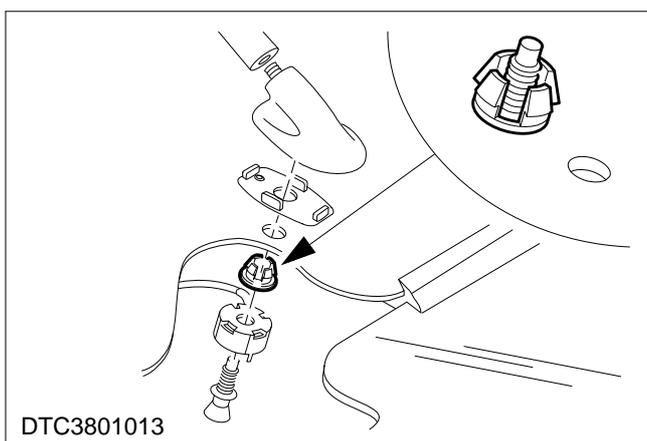

Install

3. **Refit the components in reverse order.**

Ensure the plastic insulator is correctly located in the roof panel before assembling the antenna to the roof.