



Actuator (Servotronic) – Power Steering – Remove and Install (13 481 0)

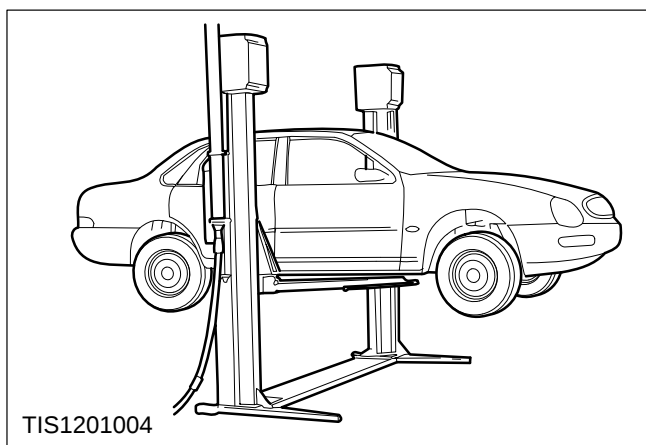

Remove

1. Raise the vehicle.

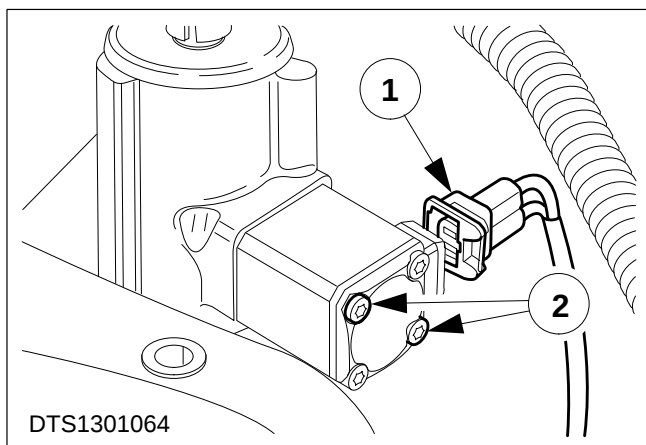

2. Remove the actuator.

- 1 Disconnect the actuator multiplug.
 - 2 Remove the two actuator retaining screws.
- Allow the fluid to drain into a suitable container.

Install

3. Refit the components in the reverse order.
4. Bleed the power steering system (refer to Operation Number 13 416 1).