

Sensor – Exterior Temperature – Automatic Temperature Control – Remove and Install (34 676 0)

Remove


1. Standard preparatory measures:

- Make a note of the radio keycode.
- Make a note of the preset radio stations.
- Lay protective covers on the fenders.

⚠ CAUTION: Disconnect the battery negative lead.

2. Unclip the exterior temperature sensor.

3. Separate the line in front of the multiplug.

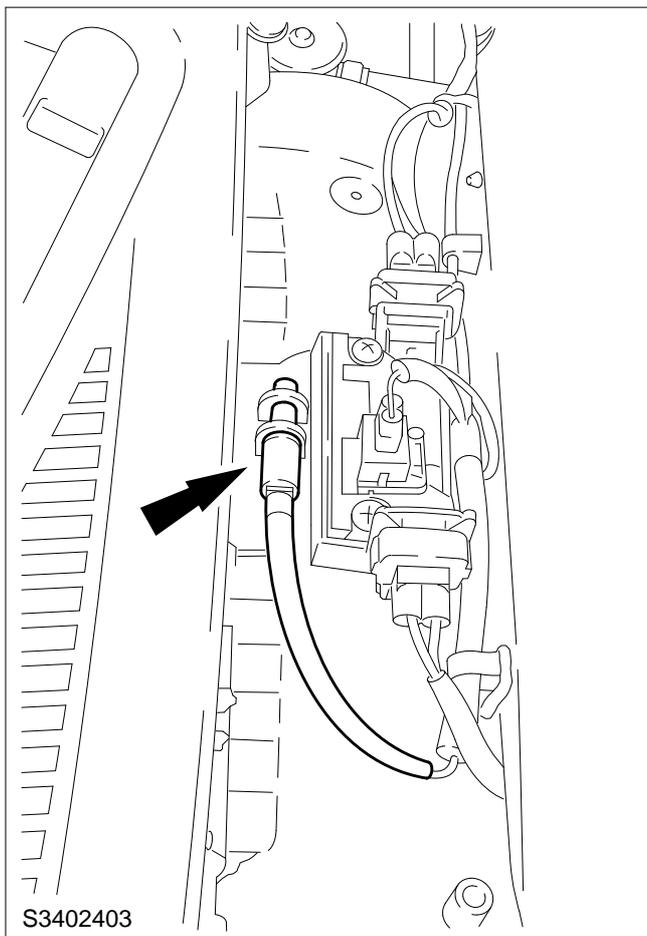

Install

- 4. Solder on a new exterior temperature sensor (polarity does not need to be observed).**
- 5. Carefully insulate the soldered joints.**
- 6. Clip the exterior temperature sensor in place.**
- 7. Standard finishing operations:**
 - Connect the battery negative lead.
 - Remove the protective covers.
 - Enter the radio keycode.
 - Reprogramme the preset radio stations.
 - Reset the clock.
 - Road test the vehicle to collect data for the PCM.