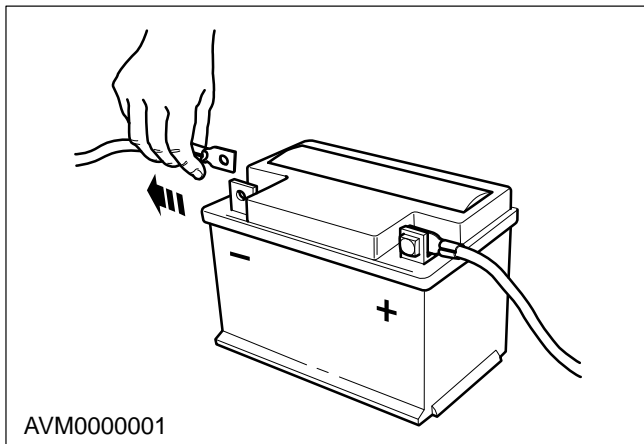
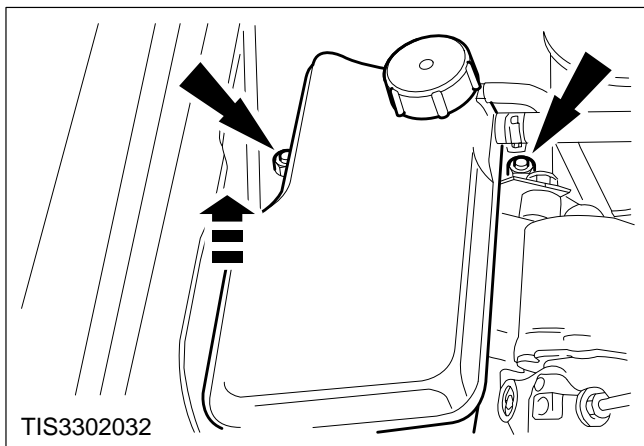
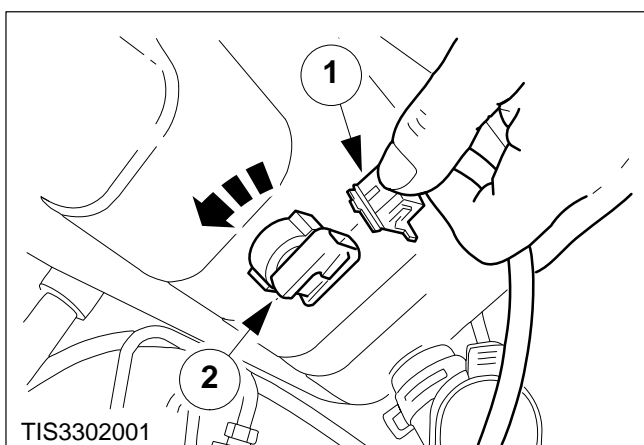


**Switch – Low Coolant Warning (Petrol) – Remove and Install (33 606 0)****Remove**

**⚠ CAUTION:** Check that the cooling system is not pressurised by slowly releasing the pressure cap using a thick cloth.

**1. Disconnect the battery negative lead.****2. Remove the expansion tank.**

- Drain or syphon the contents into a suitable clean container.
- Lift the expansion tank off the tapered bracket.

**3. Remove the low coolant warning switch.**

- 1 Disconnect the multiplug.
- 2 Remove the switch.

## Install

### **4. Refit the components in reverse order.**

Refill the expansion tank.