



Lock Barrel – Ignition Switch – Remove and Install (33 513 0)

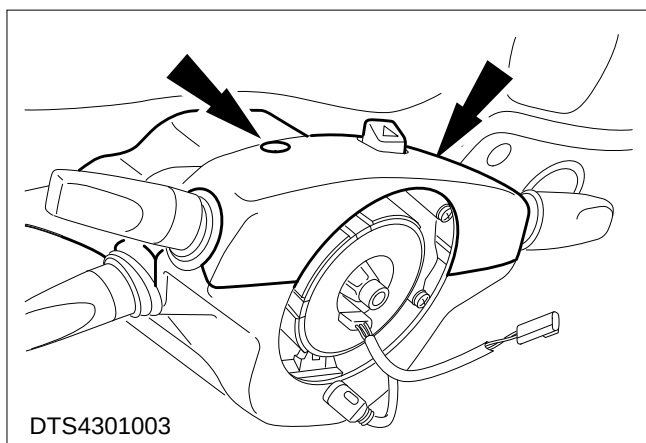


Remove

1. Remove the upper steering column shroud (two screws) (steering wheel shown removed for clarity).

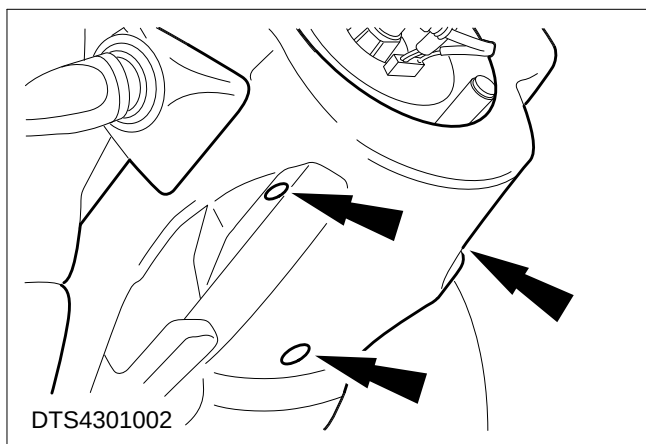


2. Remove the lower steering column shroud (three screws) (steering wheel shown removed for clarity).
3. Switch the ignition to position I (accessory).

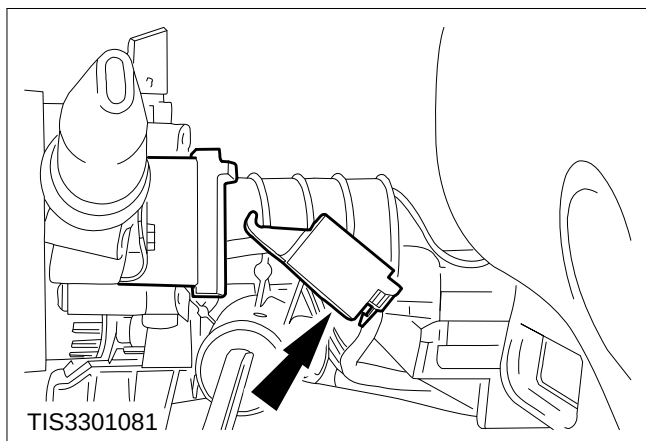

NOTE: This allows access to the locking detent.

4. Disconnect the wiper multifunction switch multiplug.

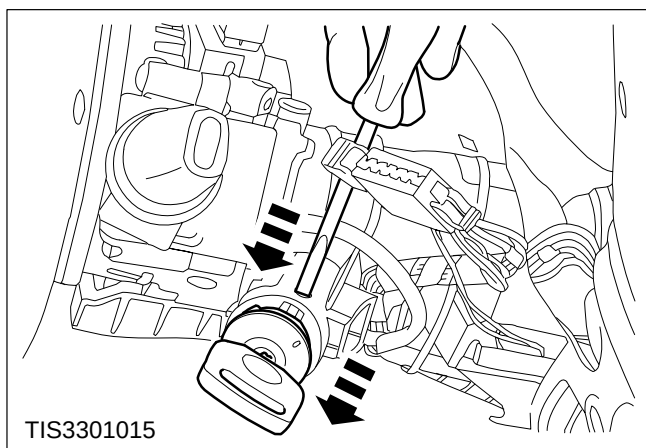

- 5. Depress the locking detent and remove the lock barrel.**

Install

- 6. Refit the components in reverse order.**