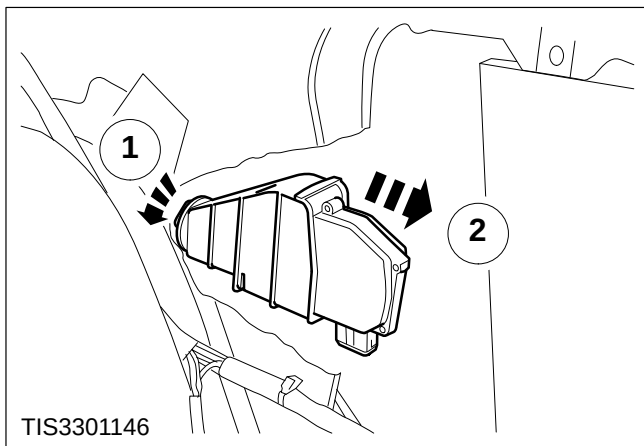
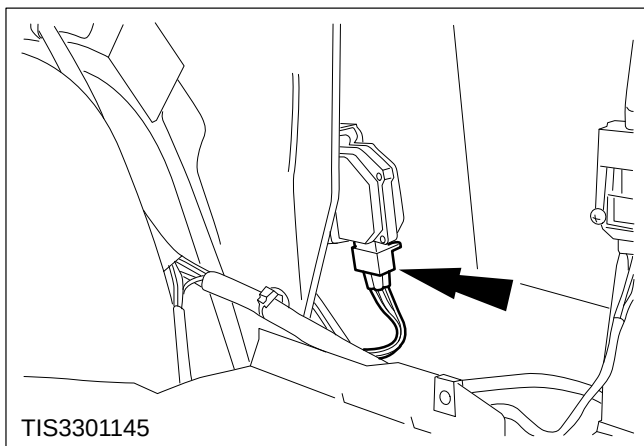


Motor – Lock – Fuel Filler Flap – Remove and Install (33 792 0)**Remove**

⚠ CAUTION: Disconnect the battery negative lead.

1. Remove the load space trim panel (refer to Operation Number 43 746 0).
2. Disconnect the multiplug.

**3. Remove the motor assembly.**

- 1 Twist the assembly anticlockwise.
- 2 Pull out the assembly.

Install

4. Refit the components in reverse order.