



Switch – Heated Windscreen – Remove and Install (33 571 0)

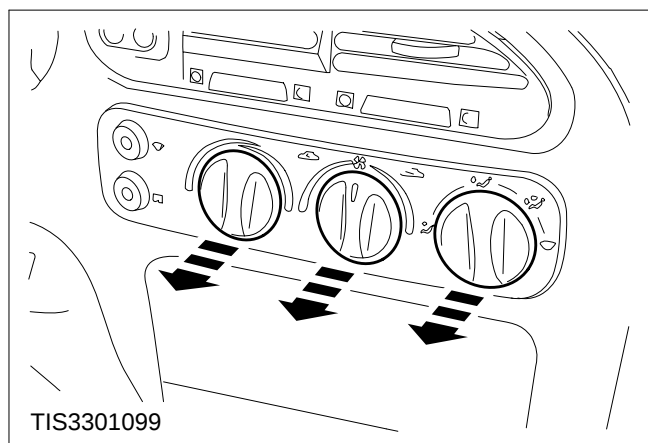


Remove

Low-series vehicles

1. Remove the heater control knobs.

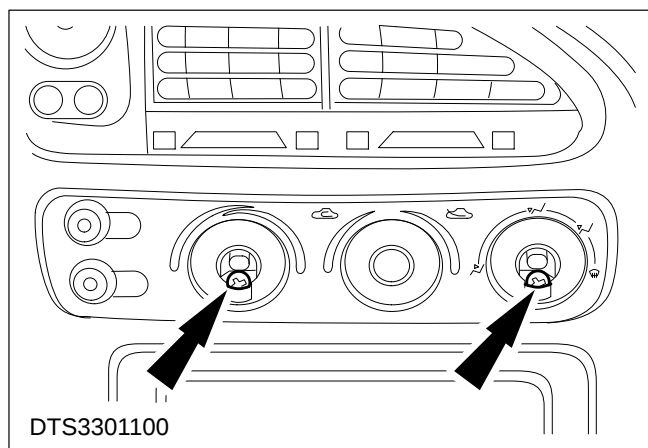


2. Remove the two screws retaining the heater control bezel.

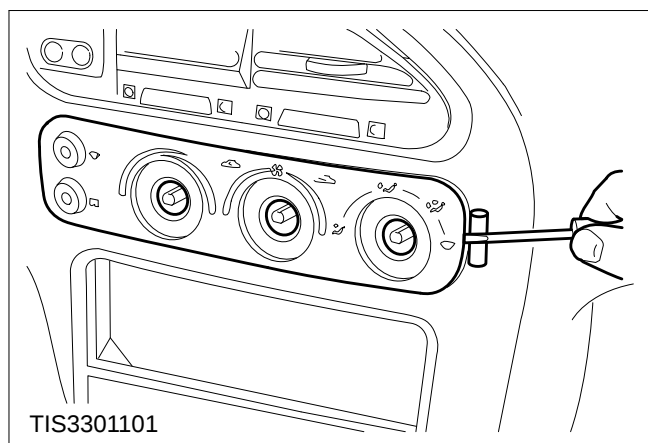

CAUTION: Only prise out the bezel from the air distribution control switch side of the bezel to prevent breakage of the locating tang at the opposite side.


3. Prise out the heater control bezel.

Use a pad between the screwdriver and the surround to prevent damage.

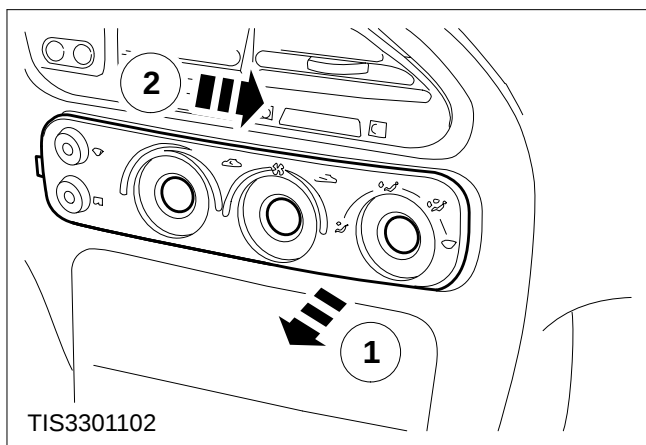

4. Remove the heater control bezel from the instrument panel facia.


- 1 Pull out from the bezel.
- 2 Slide to one side to disengage the locating tang.

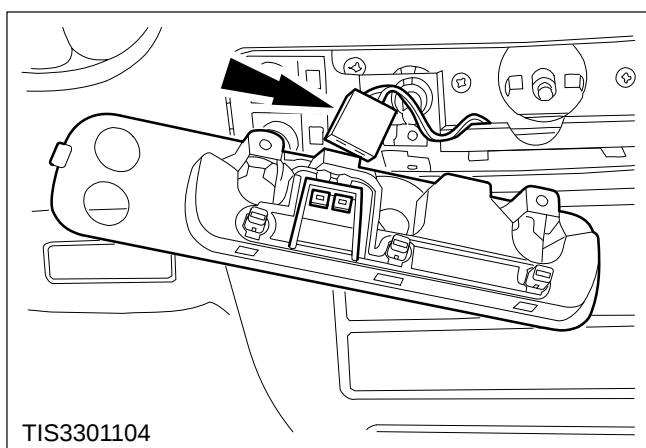

5. Disconnect the multiplug and remove the heater control bezel.


High-series vehicles

6. Remove the heater blower motor switch assembly (refer to Operation Number 33 574 0).

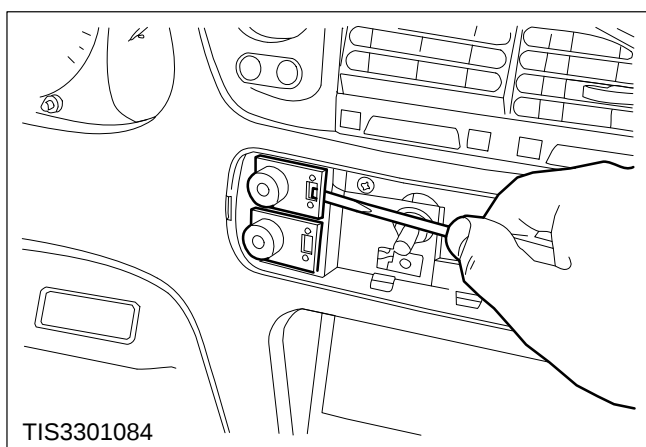

All vehicles

7. Prise out the switch.

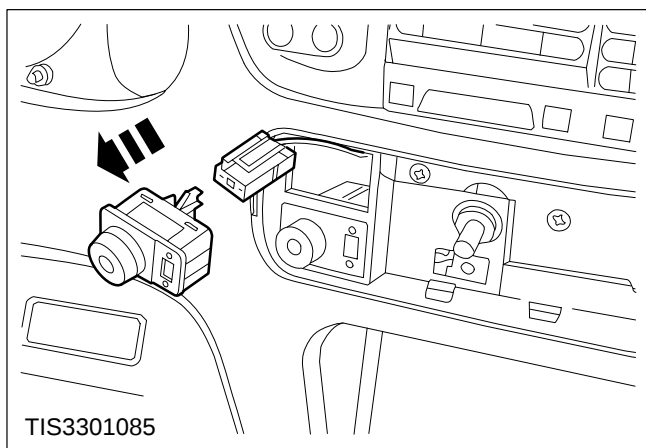

- 8. Disconnect the multiplug and remove the switch.**

Install

- 9. Refit the components in reverse order.**