



## Actuator – Variable Inlet System – Remove and Install (23 400 0)

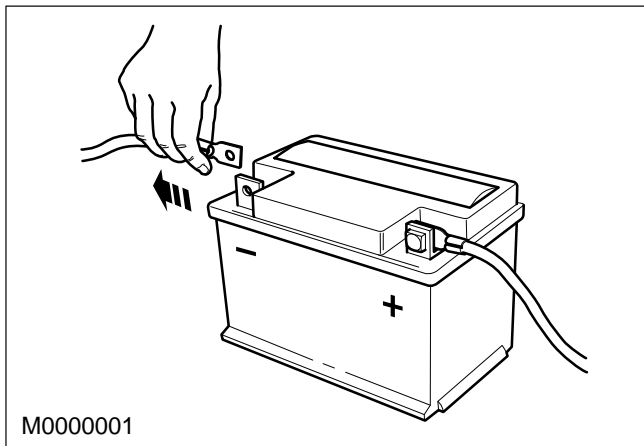


Remove


1. Disconnect the battery earth lead.

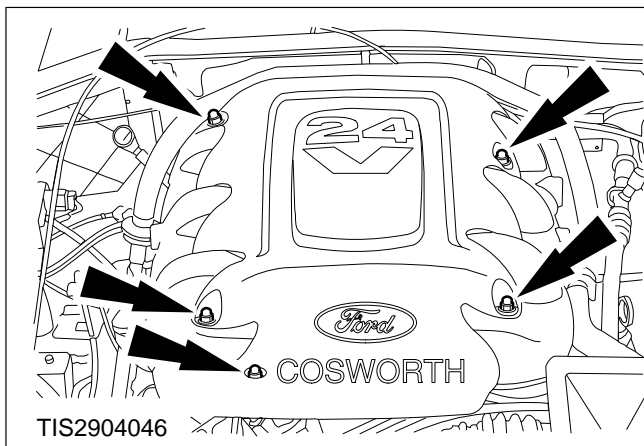


2. Remove the engine cover.

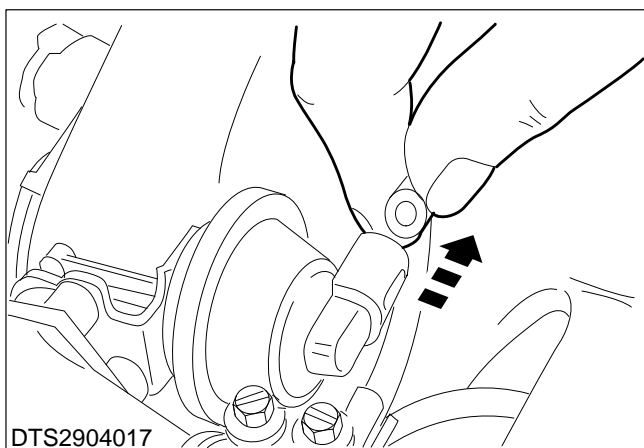

3. Disconnect the vacuum pipe.

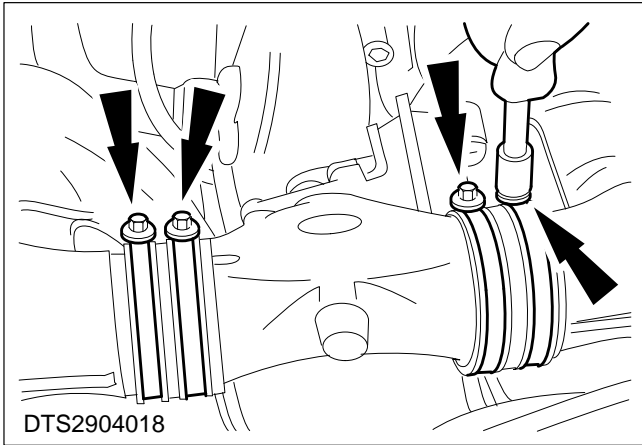

**4. Slacken the hose clips.**

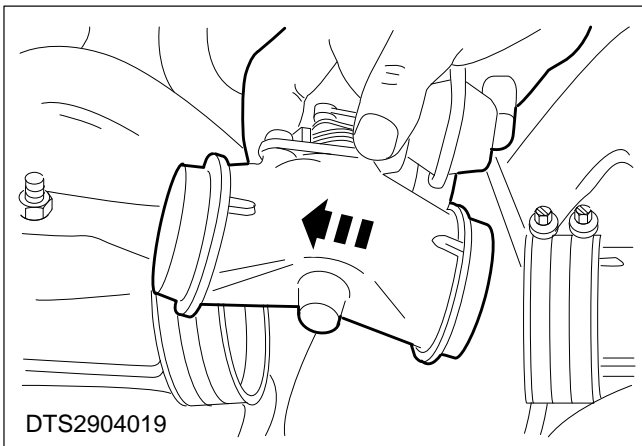

**5. Ease the actuator out of the plenum.**

Install

**6. Refit the components in reverse order.**