



## Sensor – Intake Air Temperature – Remove and Install (29 622 0)

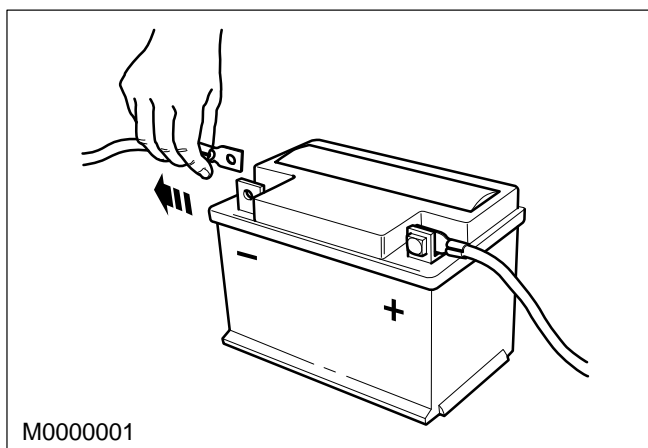


### Remove

1. Disconnect the battery earth lead.

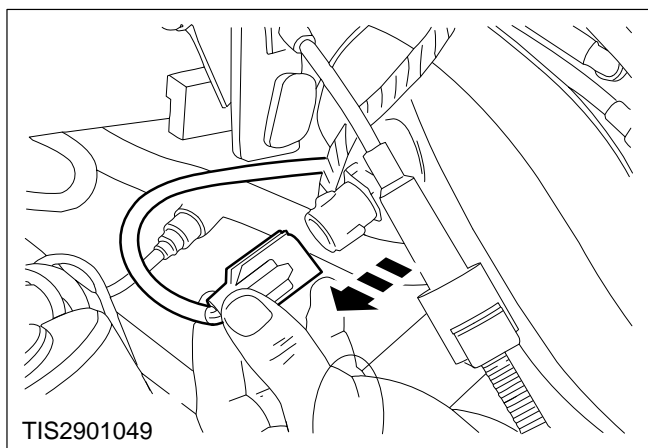

**⚠ CAUTION:** Do not pull on the wiring; pull on the multiplug body.

2. Disconnect the IAT sensor multiplug.

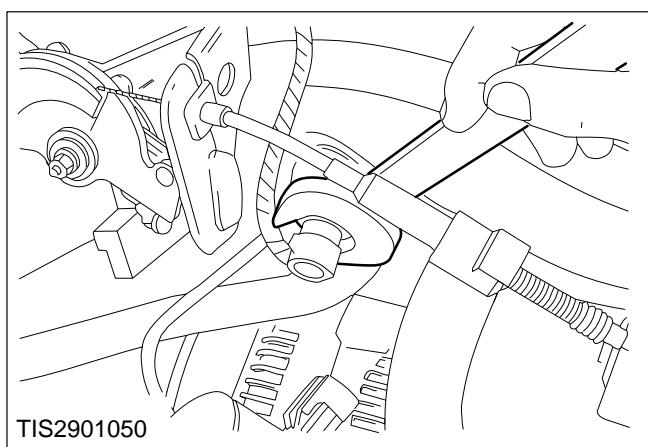

3. Unscrew and remove the IAT sensor.

## Install

- 4. Refit the components in reverse order.**