



Transducer – Exhaust Gas Recirculation System Pressure – Remove and Install (29 242 0)

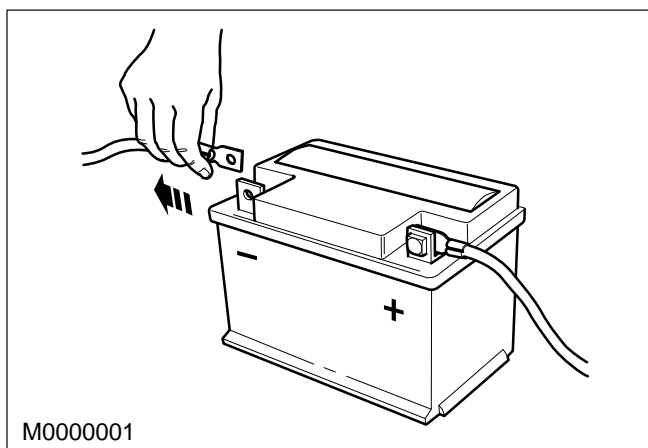


Remove

1. Disconnect the battery earth lead.

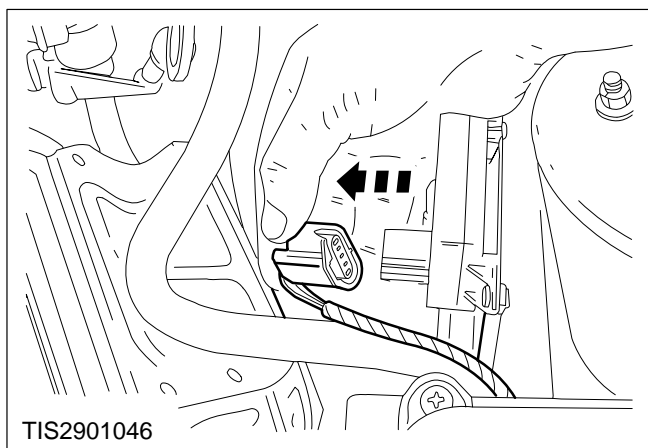


⚠ CAUTION: Do not pull on the wiring; pull on the multiplug body.


2. Disconnect the pressure transducer EGR system multiplug.

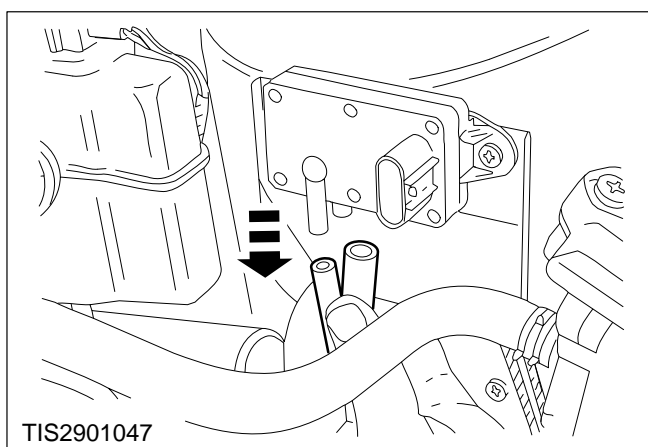

3. Disconnect the pressure transducer EGR system hoses.

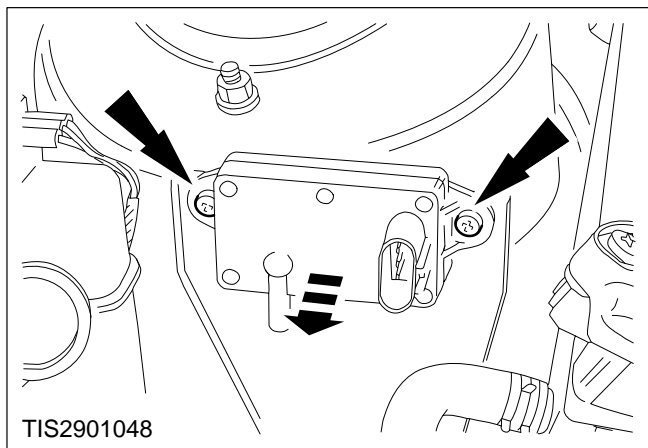

4. **Unscrew the pressure transducer EGR system retaining screws.**

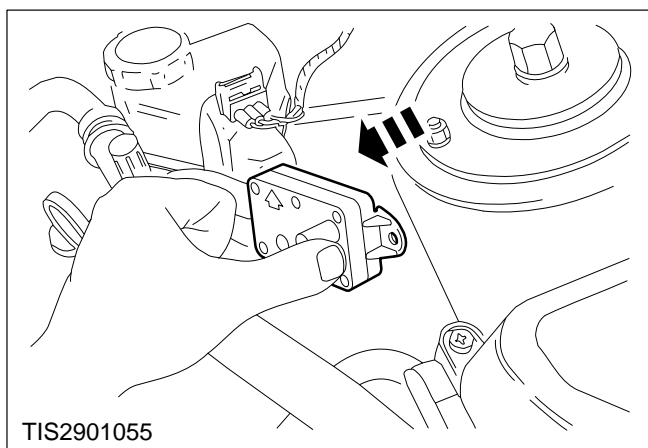

5. **Remove the pressure transducer EGR system.**

Install

6. **Refit the components in reverse order.**