



Regulator – Exhaust Gas Recirculation Vacuum – Remove and Install (23 313 0)

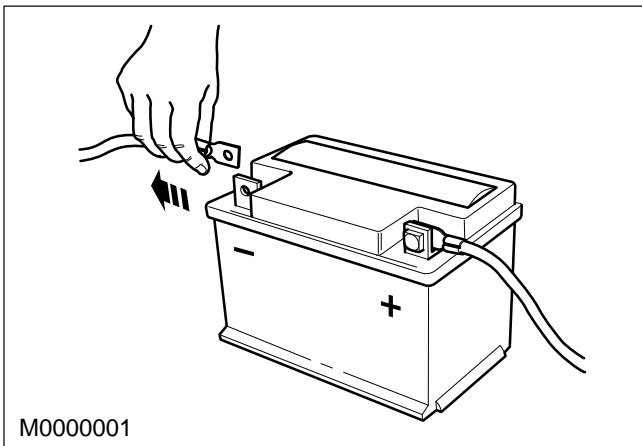


Remove

1. Disconnect the battery earth lead.

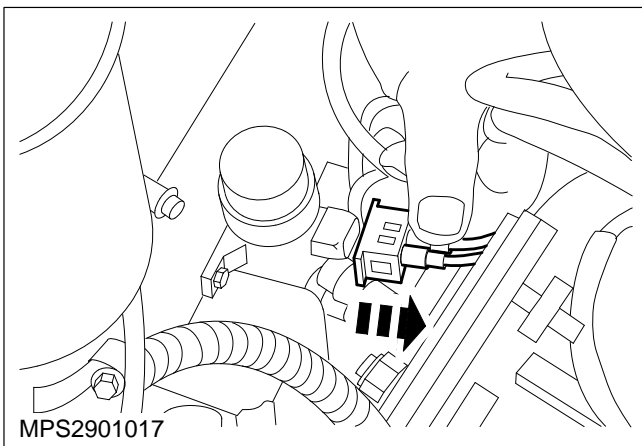


⚠ CAUTION: Do not pull on the wiring; pull on the multiplug body.


2. Disconnect the EGR vacuum regulator multiplug.

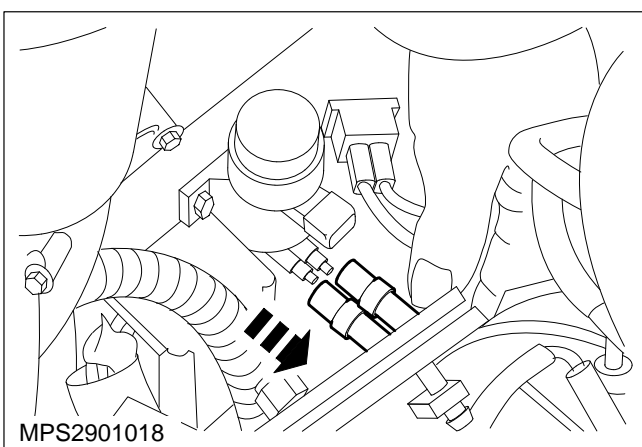

3. Disconnect the vacuum hoses.

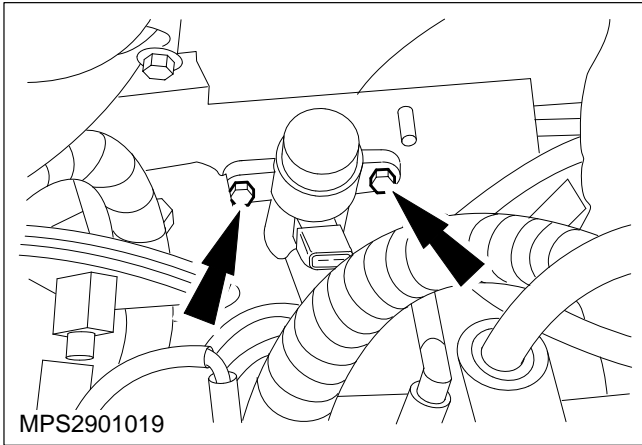

4. Unscrew the EGR vacuum regulator retaining bolts.

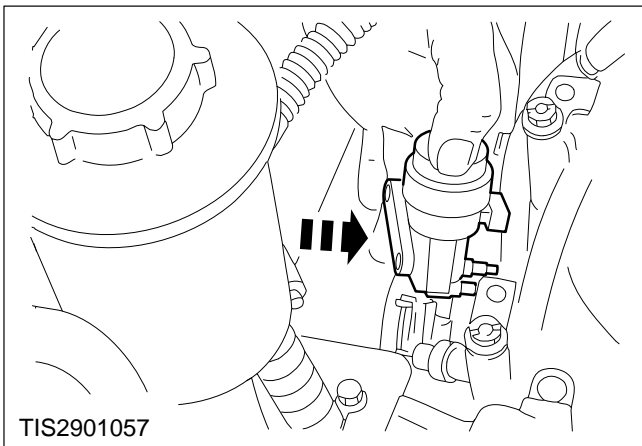

5. Remove the EGR vacuum regulator.

Install

6. Refit the components in reverse order.