



Flexible Coupling – Steering Column – Remove and Install (13 566 0)

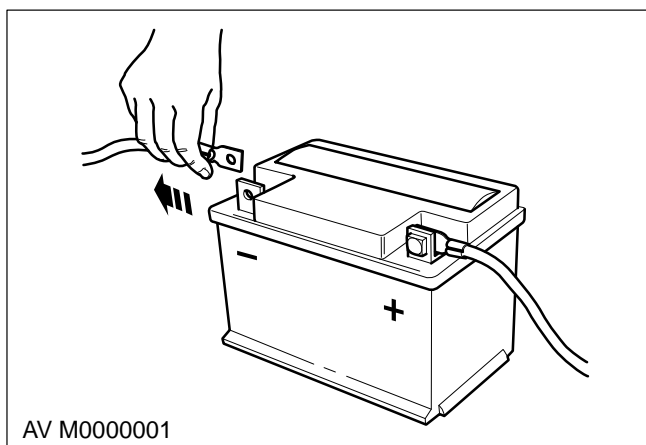


Remove


1. Disconnect the battery negative lead.

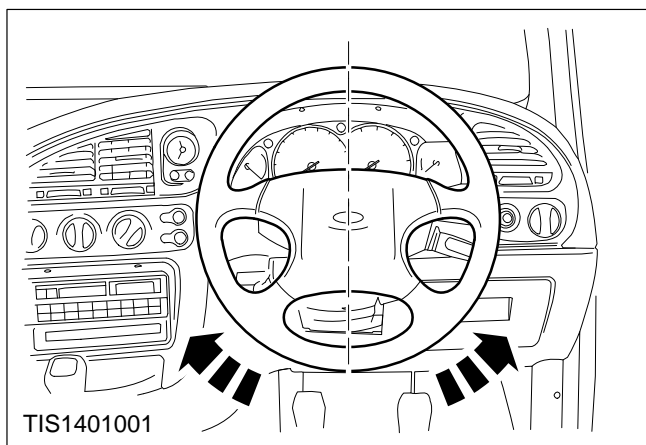

2. Centralise the steering wheel and lock in position.

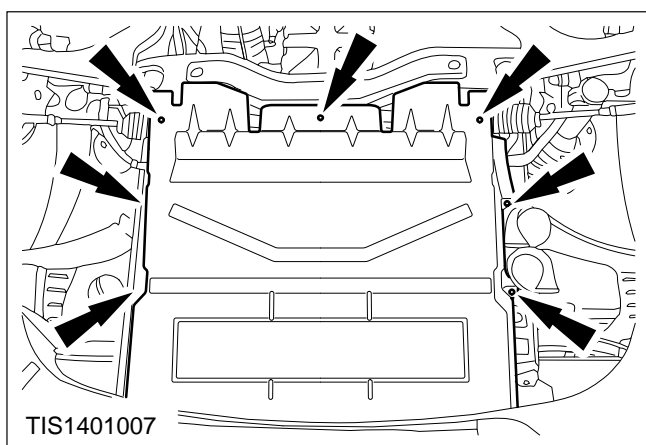


3. Raise the vehicle and remove the lower engine shield.

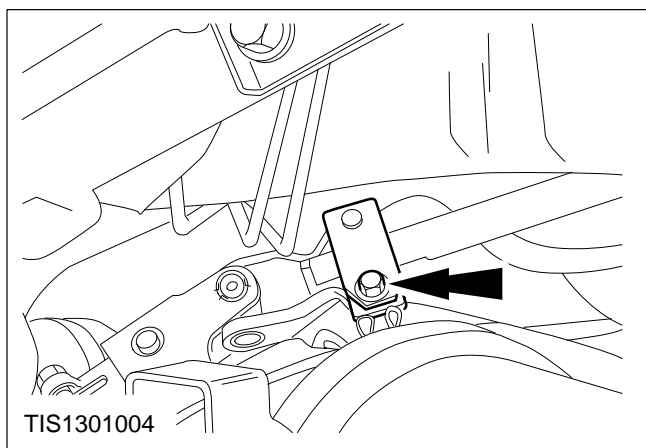


4. Remove the clamp plate bolt securing the flexible coupling to the steering column shaft.

Rotate the clamp plate to disengage.

5. Lower the vehicle.

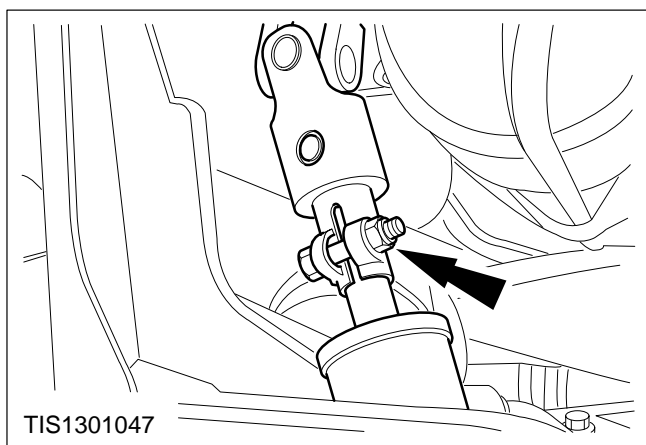


6. Remove the pinch bolt and nut securing the flexible coupling to the steering gear pinion shaft and remove the coupling.

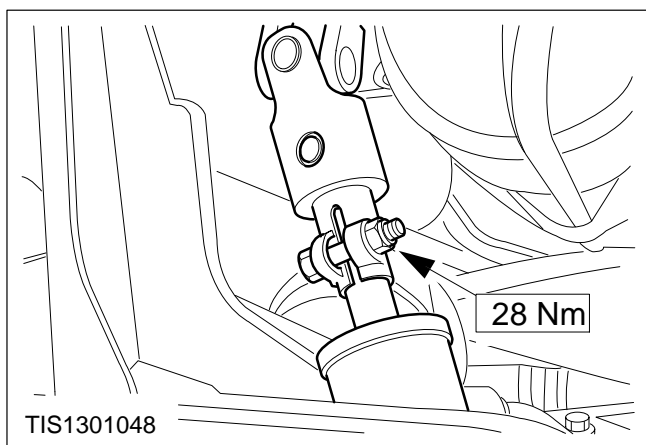

Install

CAUTION: Before refitting the flexible coupling ensure that the steering is in the straight ahead position.

7. Locate the flexible coupling over the pinion shaft secure with a new pinch bolt and nut.
8. Raise the vehicle.

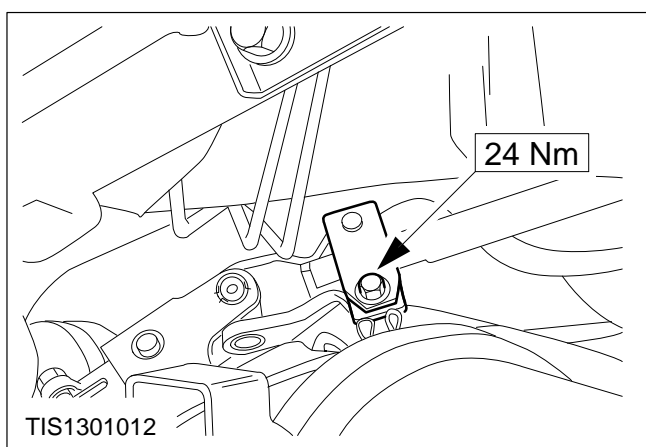

9. Align the flexible coupling clamp plate over the steering column shaft and secure with a new bolt.
10. Refit the lower engine shield and lower the vehicle.
11. Reconnect the battery negative lead.