

Fluid Cooler – Power Steering – Remove and Install (13 444 0)

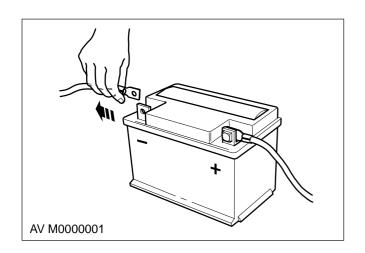


Remove

1. Disconnect the battery negative lead.

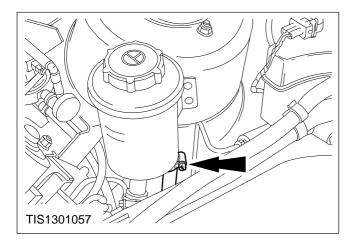


2. Disconnect the fluid cooler hose from the reservoir.

Allow the fluid to drain into a suitable container.

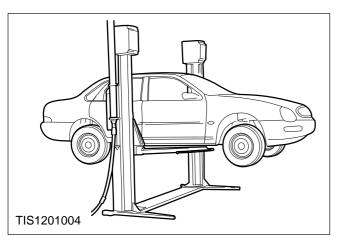

3. Raise the vehicle.

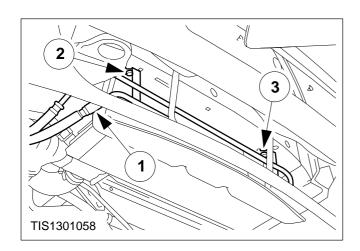

CAUTION: After removing the fluid cooler refit the fluid cooler retaining nut and bolt to hold the oil cooler in place.

- 4. Remove the fluid cooler.
 - 1 Disconnect the fluid cooler hose.
- 2 Remove the fluid cooler retaining bolt.
- 3 Remove the fluid cooler retaining nut.

Install

- 5. Refit the components in the reverse order.
- 6. Bleed the power steering system (refer to Operation Number 13 416 1).