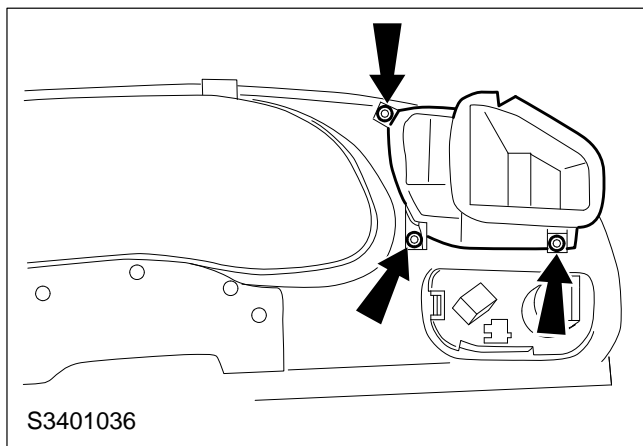


Vent – Face Level – (driver side) – Remove and Install (34 488 0)**Remove****1. Standard preparatory measures:**

- Make a note of the radio keycode.
- Make a note of the preset radio stations.
- Lay protective covers on the fenders.

⚠ CAUTION: Disconnect the battery negative lead.

2. Remove the instrument cluster bezel as described in Operation Number. 34 354 0.**3. Remove the face level vent on the driver's side.****Install****4. Refit the components in the reverse order.**

5. Standard finishing operations:

- Connect the battery negative lead.
- Remove the protective covers.
- Enter the radio keycode.
- Reprogramme the preset radio stations.
- Reset the clock.
- Road test the vehicle to collect data for the PCM.