

Liner – Wheelhouse (Front) – Remove and Install (43 228 0)

Remove


1. Raise the vehicle and remove the road wheel.

2. Remove the liner.

1 Remove the screw clips.

2 Remove the torx screws.

3 Remove the blind rivet.

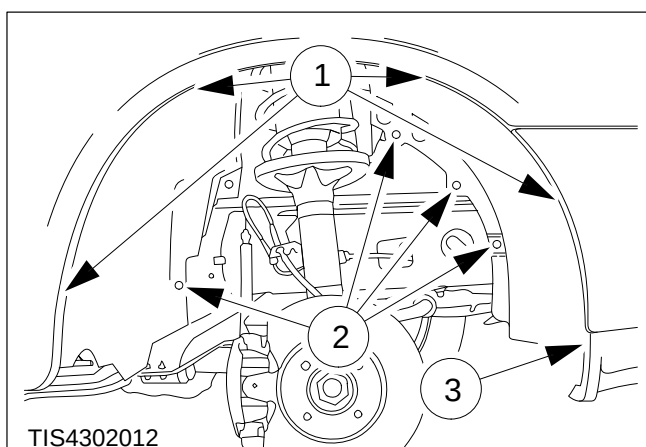

Install

3. Refit the components in reverse order.

Use a new blind rivet.

