

Vent – Face Level – (passenger side) – Remove and Install (34 487 0)

Remove

- 1. Standard preparatory measures:
- Make a note of the radio keycode.
- Make a note of the preset radio stations.
- · Lay protective covers on the fenders.



- 2. Remove the fascia crash pad as described in Operation Number. 43 644 0.
- 3. Remove the face level vent on the passenger's side.

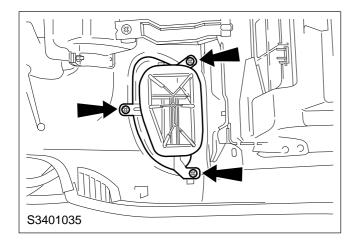

Install

4. Refit the components in the reverse order.

5. Standard finishing operations:

- Connect the battery negative lead.
- Remove the protective covers.
- Enter the radio keycode.
- Reprogramme the preset radio stations.
- · Reset the clock.
- Road test the vehicle to collect data for the PCM.