


## Selector Rod - Adjust (17 672 0)

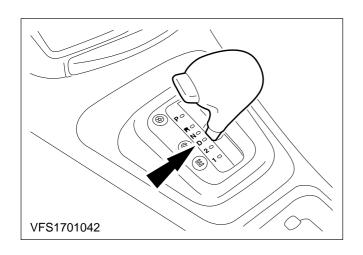


1. Move the selector lever to position "D".

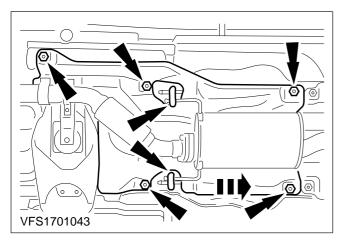


- 2. Raise the vehicle.
- 3. Unhook the loops for the rear exhaust pipe.
- 4. Detach the front heat shield and slide it backwards.

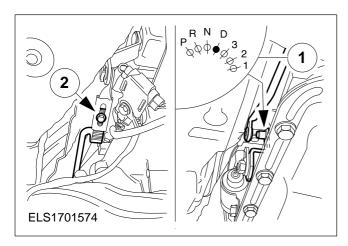

- 5. Adjust the selector rod.
  - 1 Check whether the selector lever on the selector shaft is correctly located in position "D" (three notches from rear stop).
- 2 Release the selector rod clamp bolt.

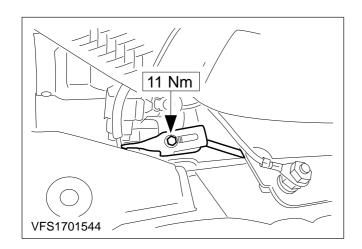

6. Tighten the selector rod clamp bolt.

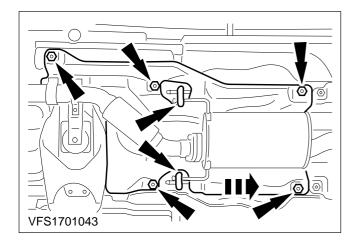

- 7. Attach the front heat shield.
- 8. Hook the loops for the rear exhaust pipe in place.
- 9. Lower the vehicle.