


Wiper Arms – Adjust (32 591 0)

Special Tools

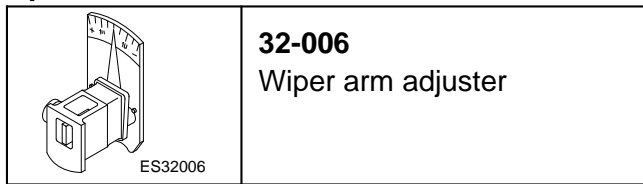

Adjust

1. Standard preparatory measures:

- Make a note of the radio keycode.
- Make a note of the preset radio stations.

NOTE: The wiper motor must be in the parked position.

- Lay protective covers on the fenders.




CAUTION: Disconnect the battery negative lead.

2. Adjust the wiper arms.

- Remove the wiper blade.
- Clamp the special tool to the wiper arm and rest it on the windscreen/rear window.

NOTE: The special tool must rest on the windscreen/rear window with all three contact points.


- Read off the angle to the windscreen glass (for specified values see “General Specifications”).

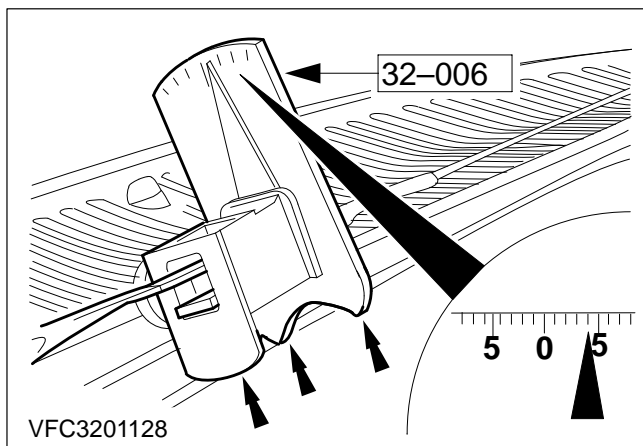

NOTE: To correct the angle, lift the tool off the glass to avoid damaging the glass.

3. Adjust the wiper arms (continued).

- Fit a spanner round the square section of the special tool and correct the angle.
- Unclamp the special tool from the wiper arm.
- Fit the wiper blades.

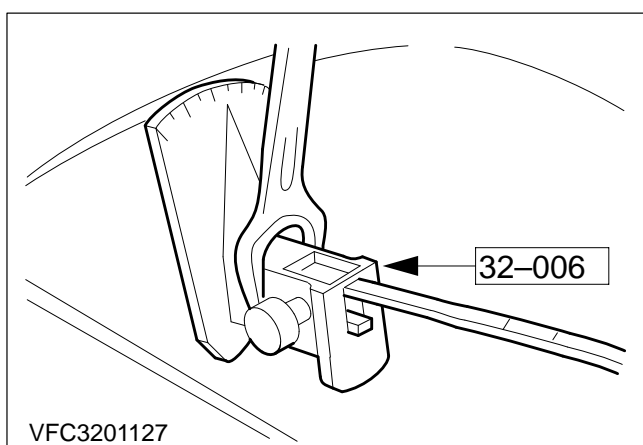

4. Standard finishing operations:

- Connect the battery negative lead.
- Remove the protective covers.
- Enter the radio keycode.
- Reprogramme the preset radio stations.
- Reset the clock.
- Road test the vehicle to collect data for the PCM.