
Gear Selector Mechanism - Remove and Install (17 634 0)


Materials

Cable ties	

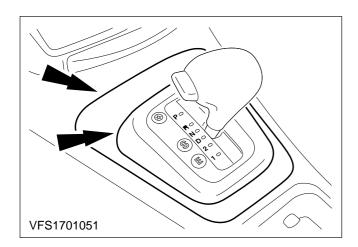


Remove


1. Remove the bezel and cover for the selector lever assembly.

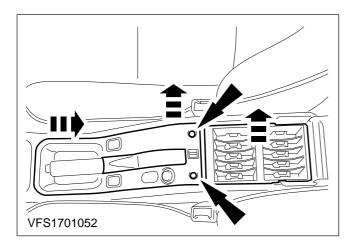


- 2. Remove the cassette holder from the centre console.
- 3. Remove the switch console.

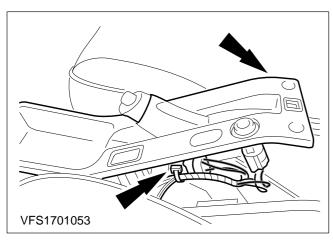


4. Lift the switch console over the handbrake lever and cut the cable ties.

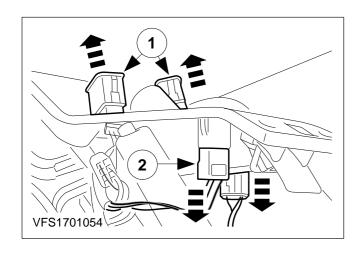


- 5. Disconnect the plugs.
- 1 Push both switches out from below.
- 2 Disconnect the multiplug.

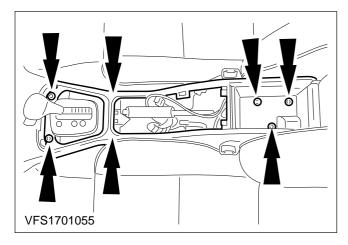


6. Remove the centre console.

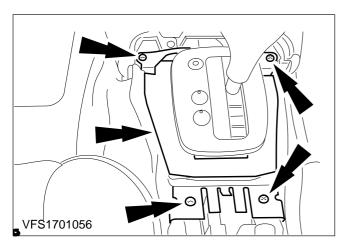

- 7. Take out the damping plate.
- 8. Detach the centre console bracket.

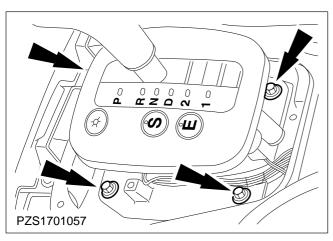


9. Remove the selector lever assembly.

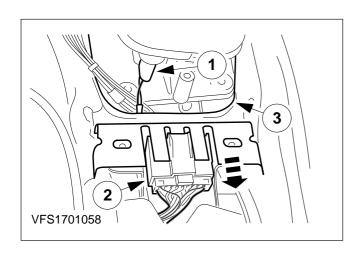


10. Disconnect the wiring loom multiplug.

- 1 Remove the light for the selector lever assembly.
- 2 Withdraw the multiplug from the centre console bracket and disconnect it.
- 3 Lift the centre console bracket slightly and draw the wiring loom and multiplug through.

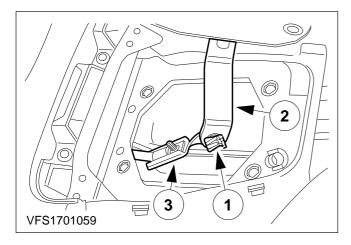

11. Detach the selector rod from the selector lever assembly.


- 1 Retaining clip
- 2 Selector lever
- 3 Selector rod

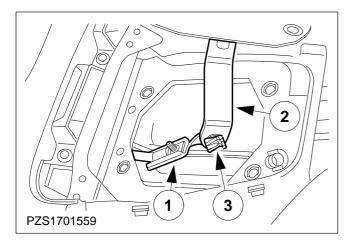

Install


12. Attach the selector rod to the selector lever assembly.

- 1 Selector rod
- 2 Selector lever
- 3 Retaining clip

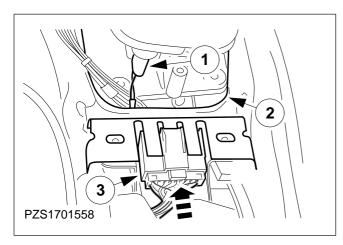


13. Connect the wiring loom multiplug.


- 1 Fit the light for the selector lever assembly.
- 2 Lift the centre console bracket slightly and draw the wiring loom and multiplug through.
- 3 Connect the multiplug and secure it in the centre console bracket.

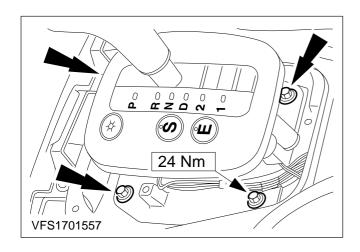


14. Install the selector lever assembly.

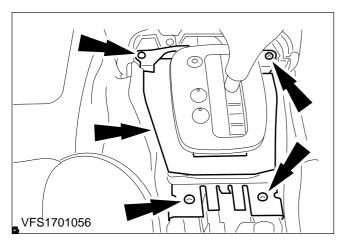


- 15. Fit the damping plate.
- 16. Attach the centre console bracket.

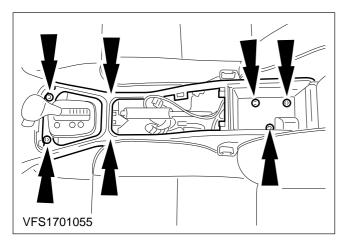


17. Install the centre console.

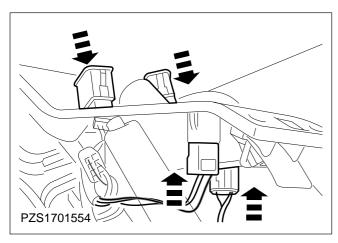


18. Connect the plugs and fit the two switches.

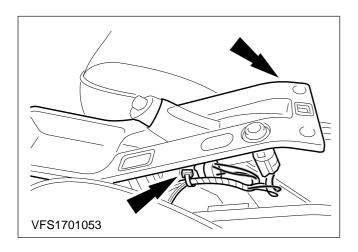

- 19. Slide the switch console over the handbrake lever.
- 20. Secure the cables with cable ties.

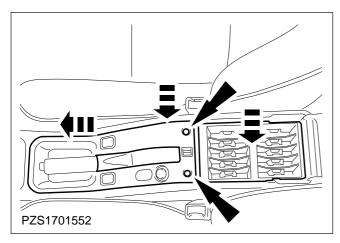

- 21. Install the switch console.
- 22. Fit the cassette holder in the centre console.

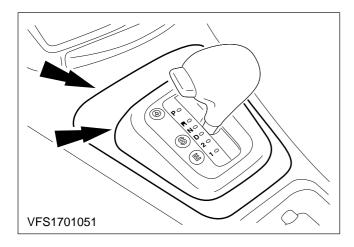

23. Install the bezel and cover of the selector lever assembly.