
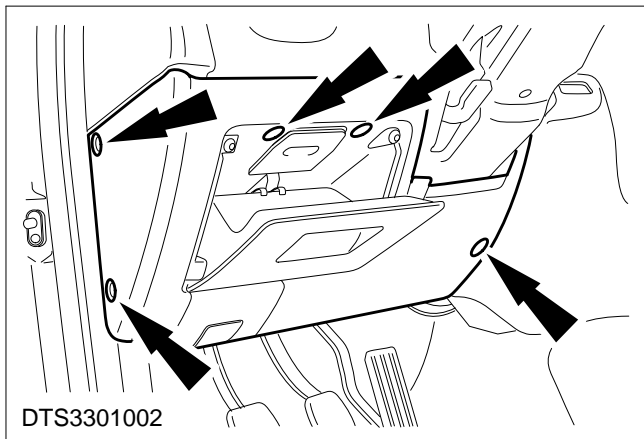



**Switch – Stop Light – Remove and Install (33 548 0)****Remove**

1. **Detach the driver's side lower crash pad/facia panel (five screws).**

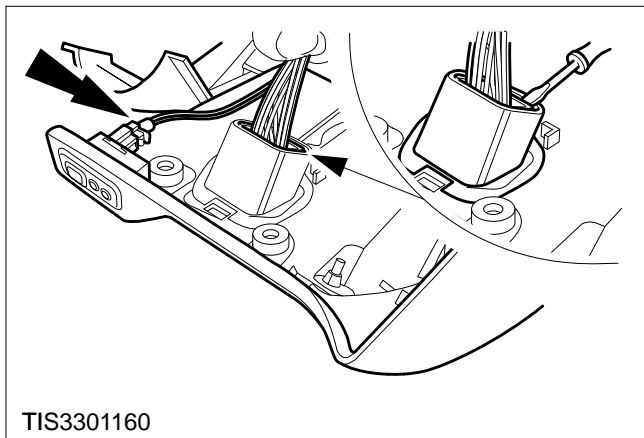


**NOTE:** There is no need to disconnect the hood release cable.


2. **Detach the driver's side lower crash pad/facia panel (continued).**
  - Disconnect the trip computer switch multiplug (if fitted).
  - Detach the data link connector and lower the panel.

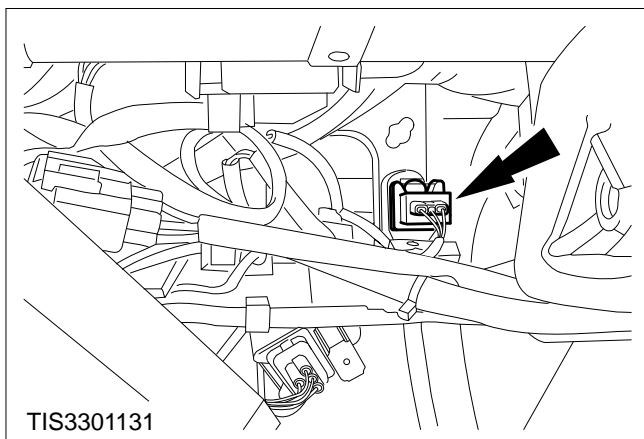

3. **Disconnect the multiplug.**

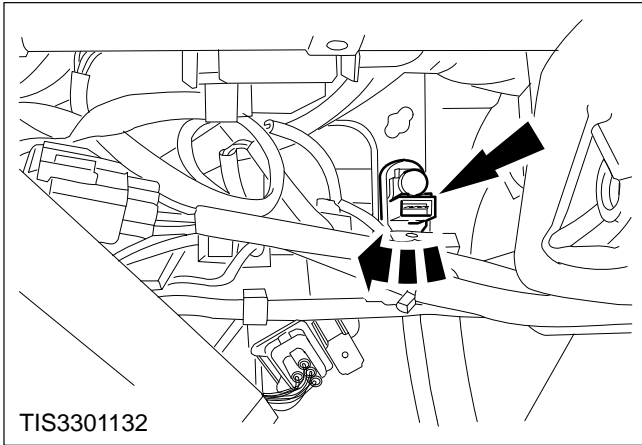**4. Remove the stop light switch.**

Twist the switch clockwise to remove.

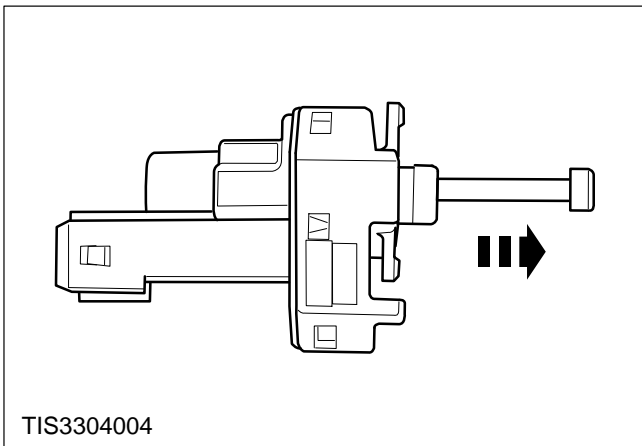**Install****5. Reset the switch:**

- Pull out the switch plunger to its full extent
- Depress the brake pedal
- Twist and locate the switch in position
- Slowly release the brake pedal.

**6. Refit the remaining components in reverse order.**